

B8210 2MP Day & Night Motorized Bullet IP Camera



Table of Contents

1. Safety Instruction	4
1.1 Safety Notice	4
1.2 Electromagnetic Compatibility (EMC).....	5
2. Overview	6
2.1 ZAVIO B8210 Features and Specifications	6
2.2 ZAVIO B8210 Package Contents	7
2.3 Minimum System Requirement	8
3. Web Interface Main Menu	9
4. Setting_Information	13
5. Setting_Basic Setup	14
5.1 Account	14
5.2 Network	15
5.2.1 TCP/ IP	15
5.2.2 PPPoE	16
5.3 Date Time	18
5.4 Video	19
5.4.1 Video Setting	19
5.4.2 Profile	21
5.4.3 Day/Night	22
5.5 Audio	24
6. Setting_Live View	26
6.1 Video	26
6.2 Audio	26
6.3 Camera Setting	26
6.3.1 Image Setting	27
6.3.2 Lens Settings	28
6.3.3 ROI	29
6.4 PTZ Setting	30
6.4.1 Patrol	31
6.4.2 PTZ Control	31
7. Settingc_Playback	32
7.1 Network Storage	32
7.2 Local Storage	34

8. Setting_Event	35
8.1 Event Server	35
8.1.1 Event Server	35
8.1.2 SD Card	38
8.2 Event List	38
8.2.1 Event List	38
8.2.2 Schedule Recording	40
8.3 Motion Detection	41
8.4 Tampering Detection	42
8.5 Schedule	42
9. Setting_System	44
9.1 Maintenance	44
9.2 Date Time	46
9.3 Security	46
9.3.1 Account	47
9.3.2 IP Address Filter	47
9.3.3 HTTPS	47
9.4 Network Basic	48
9.4.1 TCP/ IP	49
9.4.2 PPPoE	49
9.5 Network Advanced	49
9.5.1 RTSP	49
9.5.2 UPnP	50
9.5.3 Bonjour	51
9.5.4 DDNS	52
9.6 Digital I/O	53
9.7 PoE	54
9.8 LED	54
9.9 System Log	55
10. Video Surveillance Software	57

1. Safety Instruction

Thank you for purchasing this ZAVIO Network Camera. This user manual includes instructions for using and managing the camera on your network. Updated versions of this document will be posted to www.zavio.com as they become available. The latest version of this user manual can also be found on the Installation CD accompanying this product, along with user manuals in other languages.

1.1 Safety Notices

Before you use this product

This product has been designed with safety in mind. However, the electrical products can cause fires which may lead to serious body injury if it is not used properly. To avoid such accidents, be sure to heed the following.

Legal Caution

Video and audio surveillance can be forbidden by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.

Don't open the housing

Don't try to open the housing or remove the covers which may expose yourself to dangerous voltage or other hazards.

Don't use the accessories not recommend by the manufacturer

Heed the safety precautions

Be sure to follow the general safety precautions and the "Operation Notice."

Operation Notice - Operating or storage location

Avoid operating or storing the camera in the following locations:

- Extremely hot or cold places (Operating temperature: -40 °C to + 60 °C [-40 °F to 140°F])
- Exposed to direct sunlight for a long time, or close to heating equipment (e.g., near heaters)
- Close to water (e.g. near a bathtub, kitchen sink, laundry tub)
- Close to sources of strong magnetism
- Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters
- Locations subject to strong vibration or shock

In case of a breakdown

In case of system breakdown, discontinue use and contact your authorized dealer.

In case of abnormal operation

- If the unit emits smoke or an unusual smell.
- If water or other foreign objects enter the cabinet.

- If you drop the unit or damage the cabinet:
 - Disconnect the cable and the connecting cables.
 - Contact your authorized dealer or the store where you purchased the product.

Transportation

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

Ventilation

To prevent heat buildup, do not block air circulation around the device.

Cleaning

- Use a soft, dry cloth to clean the external surfaces of the device. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface.

1.2 Electromagnetic Compatibility(EMC)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

2. Overview



2.1 ZAVIO B8210 Features and Specifications

ZAVIO B8210 Features

- 2 megapixel progressive scan CMOS sensor
 - H.264 and Motion JPEG compression
 - 30 fps at 1920x1080
 - Day & night functionality with automatic removable IR-cut filter
 - 6 high performance IR LEDs and up to 40m distance
 - 3 - 9mm, F1.3 motorized, P-iris lens
 - Smart focus system for remote focal & focus control
 - Analog video output through RCA connector
 - Built-in SD card slot
 - Built-in heater and fan, enabling camera in severe environment (-40 ~ 60°C)
 - Power over Ethernet (IEEE 802.3af/ at)
 - 2 x alarm input, 2 x alarm output
 - Two-way audio, line in and line out
 - IP66 rated weatherproof housing
 - SSL v3 advanced HTTPS encryption
 - Supports Samba network storage
 - Multi-lingual user interface
 - ONVIF 2.3 and Profile S compliant
 - Free 64 channels ZAVIO CamGraba 2.0 NVR software
- Supports True Plug and Play Cloud Solution

ZAVIO B8210 Specifications

Model Name	B8210
Max Resolution	1920 x 1080 (2MP)
Video Compression	H.264

	MJPEG
Max Frame Rate	30fps @ 1920 x 1080
Max Simultaneous Streams	5
Image Sensor	1/2.8" Sony Exmor CMOS sensor
Lens	3 - 9mm, F1.3, Motorized P-iris
Horizontal Angle of View	36° - 105°
Min Illumination	0.05 lux @ F1.3 (color) 0.001 lux @ F1.3 (B/W) 0 lux @ F1.3 (IR LED on)
Mechanical IR-Cut Filter	Yes
IR LEDs	40m effective range Smart IR, adjustable brightness via FW
Camera Angle Adjustment and Pan / Tilt / Zoom	2-axis bracket (with cable protection)
Audio Support	Two-way Line in & out
Audio Compression	G.711 μ law, a law, AMR
Analog Video Output	Yes
Alarm Input / Output	2/2
Local Storage	SD
Power / PoE	PoE 802.3af/ at (Class 0) 12V DC, 1.5A
Operating Temperature	-40 ~ 60 °C (-40 ~ 140 °F)
Weatherproof / Vandal-Proof	IP66 weatherproof
Dimensions (HxWxD)	383 x 152 x 243mm, incl. bracket (15.1" x 6.0" x 9.6")
ONVIF 2.2 & Profile S	Yes
Supported Protocols	TCP/IP, HTTP, HTTPS, RTSP, RTP , RTCP, Bonjour, UPnP, FTP, SMTP, NTP, DHCP, DNS, DynDNS, PPPoE, TCP, UDP, ICMP, ARP, SSL
Video Management Software	64 channels ZAVIO CamGraba 2.0 NVR software included

2.2 ZAVIO B8210 Package Contents

You should find the following items in the packaging of your ZAVIO product.

- Network bullet camera

- Quick installation guide
- Installation CD
 - CamGraba2.0 NVR software
 - Intelligent IP Installer
 - User manual
 - Language packs
- Sun shield and screws
- Wall mount bracket and wrench
- Metal plate for wall mount bracket
- Screw pack for wall and ceiling mounting
- Alignment sticker
- Body adapter
- Wrench for front& back cover
- Waterproof Connector, Moisture Absorber, Foam tape, 2 pin terminal blocks for power.

If any items are missing, contact your dealer.

2.3 Minimum System Requirement

Your computer hardware should meet or exceed the following specifications:

Item	Requirements
CPU	Minimum Intel® Core 2 Duo or higher(Core i3 or above is recommended)
Graphic Card	256MB RAM graphic cards(or equivalent on-board graphic cards)
RAM	Minimum 1GB or RAM(2GB or above is recommended)
Operating System	Window 2000, 2003, XP, Vista or Windows 7 Mac OS Leopard10.5
Web Browser	Internet Explorer 6 or later





Note:






- If using Windows 98 or Windows ME, please install IP Installer before using WEB UI to ensure the system runs normally.
- If not able to view the recorded video file, please install Xvid codec while installing Intelligent IP Installer. (For Windows 98, ME or 2000 server, the codec might not work properly. Please download Xvid codec 1.0 from the internet.)
- Please keep updating the latest Windows software and service package. (Ex: Net Framework, Windows Media Player, Enhance ActiveX Security)

3. Web Interface Main Menu

The Live View Page





Toolbar	Function
	Click this button to take you back to the camera home page where you can live view the vide
	Click this button to open the administrator menu page, which can set up all the configuration
	Click this button to pause or resume from pause the live video stream. The function is also available in VLC mode when you use non-IE browser
	Clicking this button will stop the video stream and the video display turns black (off).The function is also available in VLC mode when you use non-IE browser

	<p>Click on the Record button, if you wish to record the live video to your computer's hard drive. When selected, a prompt will request you to specify the folder in which you want to store the video.</p> <p>Click OK to begin the recording. The Record button starts flashing, indicating that the recording is active. Click it again to stop the recording.</p> <p>Note: This function is only available in MS Internet Explorer on Windows systems.</p>
	<p>Use this button to take a snapshot of the video. Clicking the button opens up a window showing the captured frame. Save the image by clicking on the Save Image button.</p> <p>The function is also available in VLC mode when you use non-IE browser</p>
	<p>The digital zoom function allows magnification of certain areas of the video. After you click on the magnification icon, a window appears as an overlay on top of the image.</p> <p>See below.</p> <p>You can drag the box over the image, and you can adjust the magnification by moving the slider toward "T" (tele-zoom) or "W" (wide-angle). The more you move the slider toward "T," the further you zoom in and details appear larger. It is normal behavior that the image quality is reduced when using the digital zoom function.</p> <p>Digital Zoom is only available in MS Internet Explorer Web browsers.</p> <p>Note: This function is only available in MS Internet Explorer on Windows systems.</p>
	<p>Click this button to view the video in full screen mode. In full screen mode, the video is stretched to fit the entire screen and all control graphics and window elements are no longer displayed. To return from full screen mode, press the ESC key on your keyboard. You can also right- or left-click any part of the image with your mouse.</p> <p>The function is also available in VLC mode when you use non-IE browser</p>
	<p>Returns the user to the main live video page.</p>



<p>Client Setting</p>	<p>Click this button and the client settings dialog will open.</p> <p>Profile- Select your preferred profile from the drop-down list. The network camera can store different profiles that provide different video settings. You can define these profiles in the administrator menu, e.g, one profile is for low bandwidth environment whereas another profile is for maximum quality.</p> <p>View Size- There are two choices here. "Fit Screen" will keep the video small so that it will always fit into the view port of the live video page. "Full Screen" is actually not full screen at all, but it displays the video stream at it's original size. So, if you select a profile that displays 1080p contents and select full screen for the view size, the video will be rendered at 1920 x 1080 pixels on your screen.</p> <p>Protocol- Select the transfer protocol here.</p>
<p>PTZ</p>	<p>Set- Press on set button to remember the current position of the camera, the preset positions will be named with "Preset1" and so on.</p> <p>Preset- A preset position is a prede fined view that can be used to quickly steer the camera to a specific location.</p> <p>Go- Click on Go button, a drop-down list allows you to select a certain preset position.</p> <p>Patrol- Before starting this function, it required to specify Guard tour settings. Please define the patrol tour in administrator menu first. A guard tour displays the video stream from different preset positions, one-by-one, in a predetermined order or at random and for configurable time periods. The enabled guard tour will keep running after the user has logged off or closed the browser</p>
<p>Focus</p>	<p>Zoom- You can click the arrowhead to adjust the zoom value, or click and drag the pointer to zoom in for tele side and zoom out for wide side.</p> <p>Focus- When the zoom factor is changed or the live view is out of focus, you can click the arrowhead or click and drag its pointer along the slide bar to find the best image focus.</p>

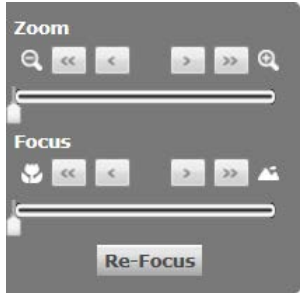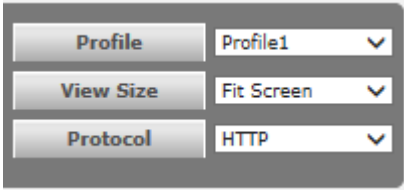

	<p>Re-Focus- The faster way to find the best focus. We suggest you click Re-Focus button to automatically find the appropriate focus value and click arrowhead of zoom or focus to do slight adjustment.</p>
--	---

4. Setting Information

The camera's administrator menu allows you to configure all aspects of your ZAVIO network camera. This page provides a complete overview of the status of your network camera.

ZAVIO

- Information
- Basic Setup
- Live View
- Playback
- Event
- System

Information

Product Information

Product Name	2Megapixel D/N Outdoor Motorized Bullet Camera, PoE,
Firmware Version	M2.10.13.2
Firmware Date	Mon Oct 13 09:58:22 CST 2014
Onvif Version	2.30
MAC Address	00:1B:FE:04:32:DD
Date Time	2014-10-21 13:44:22
Bandwidth Usage	Receiving = 47 kbps transmitting = 12kbps
Fan State	OFF
Heater State	OFF
Temperature	28°C / 82°F

Security

Video Connection	0
Account	2
Anonymous Viewer	Disabled
HTTPS	Disabled
IP Address Filter	Disabled

Video Setting

Image

Image Rotated:None,
Video Clip Format: Profile1,

Day / Night

IR Cut Filter Mode:Day Mode,
IR Mode:Inactive

Event List

Name	Enabled	Trigger	Action *	Schedule
No item has been contained.				

* D1/2=Digital Output 1/2, F=FTP Upload,
S=SMTP notification, E=HTTP notification,
N=Network Storage, SD=SD Card

Network


TCP/IP	10.0.50.52 , HTTP Port:80
PPPoE	Disabled
UPnP	Enabled
Bonjour	Enabled , Zavio-00:1B:FE:04:32:DD

RTSP


Port Range: 5000-7999, RTSP Port: 554,
RTSP Configuration: video.pro1, Authentication: Disabled.
RTSP Configuration: video.pro2, Authentication: Disabled.

5. Setting Basic Setup

The basic setup allows you to manage the user accounts of your network camera, define the network parameters, set up the date and time settings and most importantly, the video settings.

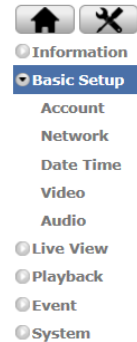

5.1 Account

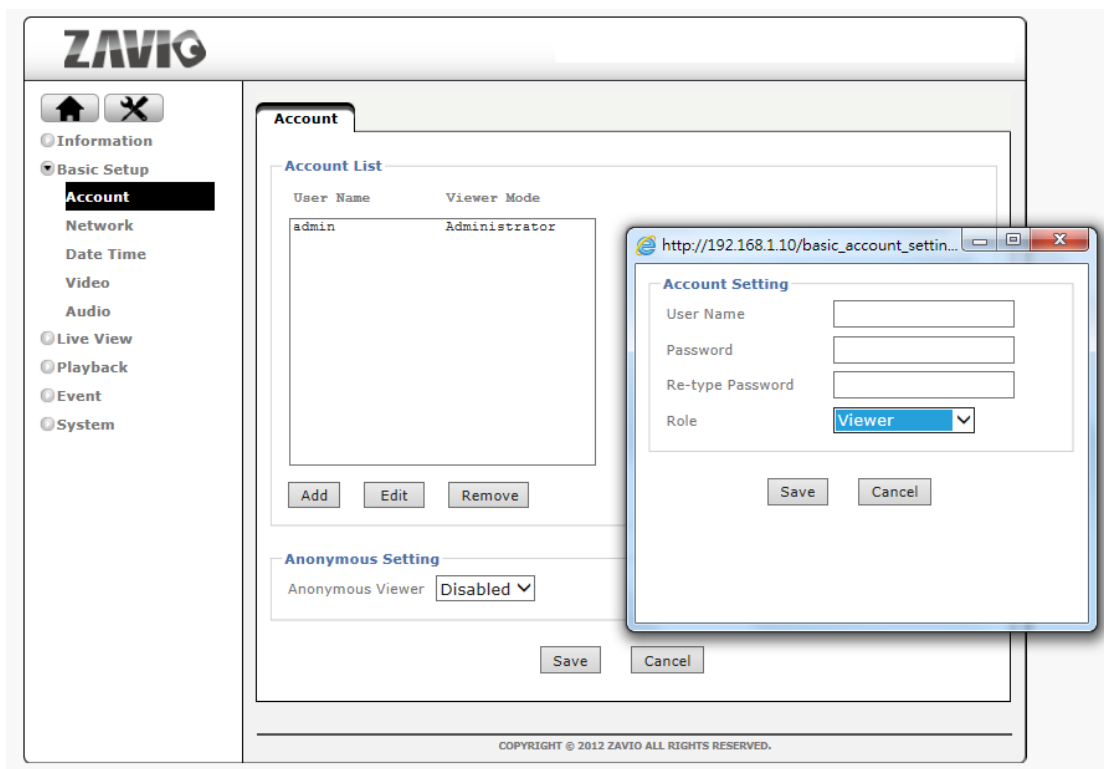

The ZAVIO network camera allows the creation of different user accounts with different levels of access to the camera. There are three main user levels. The Viewer account only allows viewing the live video page of the camera. The Operator account allows viewing the live video as well as changing the image setup settings, such as brightness, contrast, etc. Only the Administrator account has full access to all camera settings, including the Settings menu. You can define up to nine additional user accounts. The user name and password must be between 4 and 16 characters in length. For each account you can also specify different user authority (Viewer, Operator or Administrator).

Account List:

Click the Add button to create a new user account. A popup window will open up. Here you

type in a user name and a password for the new account. Also, you must define the role of the new user account. The example shows how we create a guest account that only has viewing rights, but cannot change any settings.

Click Save to create the new user account.

Highlight an account to either edit or remove it.

Note that the admin user account cannot be removed.

Anonymous Settings:

Enabling this will allow any user to view the live video from the camera live video page without entering a user name or password. If you do not want to allow this to happen, be sure

to set this option to

“Disabled.”

Anonymous Setting
Anonymous Viewer **Enabled** ▼

5.2 Network

On this page you can define the network settings of the camera. By default the camera is set up to automatically obtain the necessary IP information from the DHCP server (e.g., the router) in your network. You can, however, set up the IP address and related settings manually.

5.2.1 TCP/IP

The screenshot shows the ZAVIO web interface for network configuration. The left sidebar contains a menu with options: Information, Basic Setup (expanded), Account, Network (highlighted), Date Time, Video, Audio, Live View, Playback, Event, and System. The main content area is titled 'TCP/IP' and 'PPPoE'. Under 'Internet Protocol Version 4 (TCP/IPv4)', the MAC Address is 00:1B:FE:04:E4:17. There are two radio buttons: 'Obtain an IP address automatically (DHCP)' (unselected) and 'Use the following IP address' (selected). The IP address is 10.0.0.233, Subnet Mask is 255.255.255.0, and Default Gateway is 10.0.0.1. There are also two radio buttons for DNS: 'Use the following DNS server address' (selected). Preferred DNS Server is 10.0.0.18 and Alternate DNS Server is 10.0.0.19. Under 'Internet Protocol Version 6 (TCP/IPv6)', the IP Address is fe80:0000:0000:0000:021b:feff:fe04:e417 / 64. Under 'HTTP', the HTTP Port is 2033 (selected) with a range of 1124 ~ 65534. There are 'Save' and 'Cancel' buttons at the bottom. The footer contains the text 'COPYRIGHT © 2014 ZAVIO ALL RIGHTS RESERVED.'

Internet Protocol Version 4(TCP/IPv4):

MAC address- MAC address stands for Media Access Control address. This is the unique hardware address of the camera's network interface.

Obtain an IP address automatically (DHCP)- This is the default setting. In this mode the camera obtains the IP information from the DHCP server in your network.

Use the following IP address- Activate this option in order to assign a static IP address to the camera. You need to enter a valid IP address, subnet mask and default gateway address in the corresponding fields.

Obtain DNS server address automatically - automatically use the DNS server settings provided by the DHCP server.

Use the following DNS server address- When you disable DHCP, you also need to provide the camera with valid DNS settings. The Primary DNS server must be filled out. It is often the same IP address as the Gateway address.

Internet Protocol Version 6(TCP/IPv6):

IP address- The IPv6 IP address of ZAVIO camera is automatically assigned by converting the MAC address of the IP camera. User is not able to modify it.

HTTP:

HTTP port number- The default value is 80 and normally there is no need to change it. If you decide to change the http port to a different value; e.g., 1024, you need to do two things:

First, after saving the settings you need to reboot the camera via the System -> Initialize menu.

Secondly, after the reboot is completed you need to connect to the camera using the URL `http://camera_ip:portnumber`.

5.2.2 PPPoE

The screenshot displays the ZAVIO web interface for configuring PPPoE. The interface includes a sidebar on the left with navigation options: Information, Basic Setup (selected), Account, Network (highlighted), Date Time, Video, Audio, Live View, Playback, Event, and System. The main content area is titled 'PPPoE' and contains the following fields and options:

- PPPoE: On Off
- Authentication Type: A dropdown menu showing 'PAP' and 'CHAP' options.
- IP Address: A text input field containing '0.0.0.0'.
- User ID: A text input field.
- Password: A text input field.
- Re-type Password: A text input field.
- Obtain DNS server address automatically: (selected)
- Use the following DNS server address: (unselected)

At the bottom of the configuration area, there are 'Save' and 'Cancel' buttons. The footer of the page reads 'COPYRIGHT © 2014 ZAVIO ALL RIGHTS RESERVED.'

PPPoE is the most common form of connection for DSL-based Internet service.

You can use this function to connect the camera directly to a DSL modem. A common application for this is where the network camera is installed in a remote location where no network is present. In the location is a DSL Internet connection (DSL modem), but no router or any other network infrastructure. You can connect the camera to the DSL modem and enter your DSL account information in the fields below.

PPPoE:

PPPoE- On

Authentication Type- PAP or CHAP

IP address- Displays the current IP address obtained from the Internet Service Provider (ISP). It displays 0.0.0.0 if the camera is not connected to the Internet via PPPoE.

User ID- Enter the user ID for your DSL service here. The user ID has been given to you by your ISP.

Password- The password for the DSL account goes here. Re-type the password in the field below.

DNS Server- Typically, your ISP will send DNS Server information to the camera when it connects. Some ISPs, however, require entering specific DNS servers manually. In that case you can activate the option "Use the following DNS server address" and enter the primary and secondary DNS servers in the fields below (not shown on the screen shot).

5.3 Date Time

ZAVIG

Information
Basic Setup
Account
Network
Date Time
Video
Audio
Live View
Playback
Event
System

Date Time

Current Date/Time

Current Date/Time: 2014-10-21 13:57:09
PC Clock: 2014-10-21 13:57:07
Date/Time Format: yyyy-mm-dd hh:mm:ss

Synchronization Method

Keep Current Setting
 Synchronize with client PC
 Manual Setting
 Synchronize with NTP

Use the following NTP server address

server 1: pool.ntp.org [Test]
server 2: 1.pool.ntp.org [Test]
server 3: 2.pool.ntp.org [Test]
server 4: 3.pool.ntp.org [Test]

Time Zone

Time Zone: (GMT+08:00)Taipei
Daylight Saving Time: On Off

[Save] [Cancel]

On this page you can define the time settings of the camera.

Current Date/Time:

Current Date/Time- Displays the camera's current time.

PC Clock- This is the date and time of the computer you are currently using to connect to the camera.

Date/Time Format- The format determines how the date/time is displayed on the live video.

Synchronization Method:

Keep current setting- You don't want to change the date and time.

Synchronize with client PC- It means to adjust the camera time to your PC. Be aware of the fact that this option sets the time only one time. From that point forward, the camera time will start to differ from your PC time as time progresses, and occasional re-synchronization will be necessary.

Manual Setting- Lets you manually enter the time and date. As with the previous option, the camera's time will become inaccurate as time passes and you will need to re-synchronize the time periodically.

Synchronize with NTP- This option is the recommended setting. In this mode, the camera will synchronize its time settings based on the interval setting (ranging from once per hour to once per day). The camera obtains the time from the NTP server. You can use the default value unless your camera is not connected to the Internet, or if a firewall in your network blocks the outgoing NTP request of the camera. Select “Manual” and you can enter a different NTP server; e.g., a server in your local network.

Time zone:


Time zone- Select the correct time zone for your location.

Daylight Saving Time- You can define the range of Daylight Saving Time by activating this option. The camera will adjust the time (move the clock forward or backward by one hour) depending on the programmed start and end time. If your camera is not equipped with this feature, you can adjust the time zone manually for Daylight Saving Time.

5.4 Video

The following three menus: Video Setting, Profile and Day/Night, allowing defining all video-related parameters. Note that the Day/Night option as well as other parameters may not be available on all models.

5.4.1 Video Setting

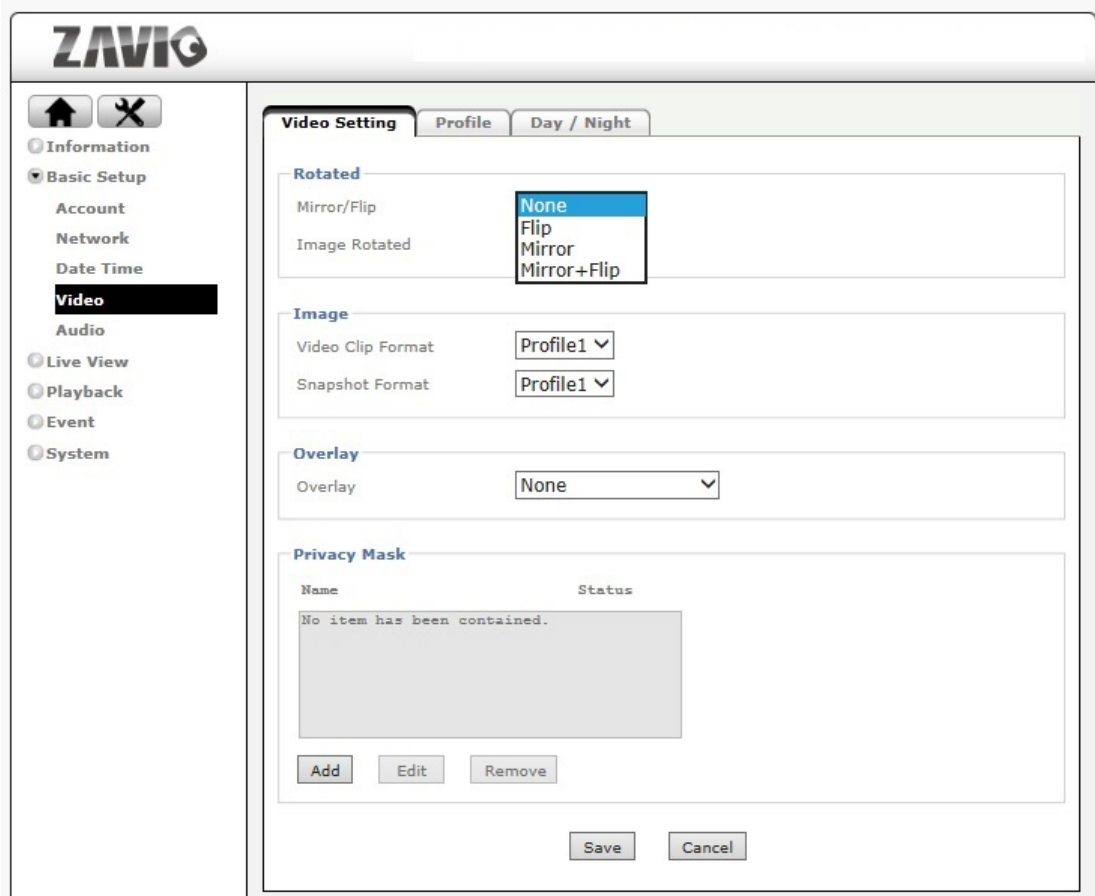

Rotated:

Mirror/Flip- Allows to mirror and flip the image.

Image Rotated- Allows 90/180/270 rotating the image.

Image:

Video Clip Format- Select which video profile the camera should be using for video clips it records in such as the network storage device, or SD card.

Snapshot Format- Select the video profile used for snapshots (e.g., for JPG upload to a FTP server).

Overlay:

Overlay- Define what kind of an overlay you want for the live video.

Text Color- Choose between black or white.

Background color- Select from either black, white or transparent.

Display Position- Define where the overlay should appear on the live image.

Privacy Mask:

Privacy masking is the ability of the camera to back out (censor) certain parts of the live video.

Example: The camera is installed in your company; for example, overlooking the warehouse.

In one corner of the warehouse is the break room, where the employees go for their lunch

breaks. In many countries it is

not permitted to monitor the

workers during their break. To

comply with laws and

regulations, you can define a

privacy mask in the break area

to ensure that this area is not

being monitored or recorded by

the camera.

Click "Add" to create a new

privacy mask.

As you can create multiple


masks, you need to provide a

name for the mask, and you can


define which color you want to

overlay to be. Finally, set the status to "Enabled" and click "Save" to create and activate the

privacy mask.

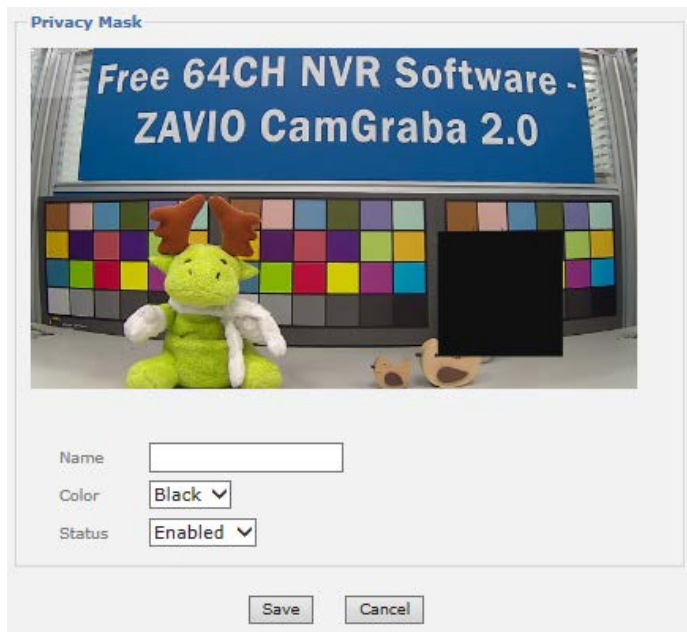

5.4.2 Profile

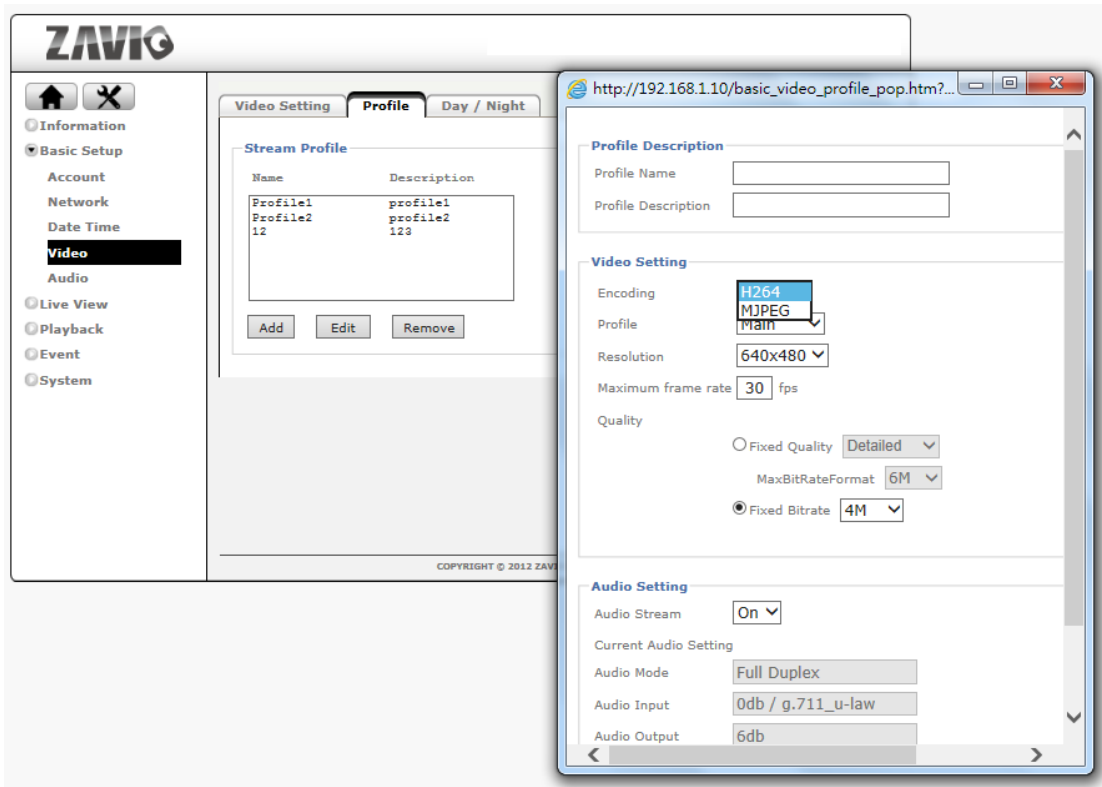

The ZAVIO network camera allows the creation of video streaming profiles. For each profile you can define the video resolution, the viewing area and the video codec that is to be used. Click “Add” to create a new profile, “Remove” to delete a profile or “Edit” to modify an existing profile.

Video Setting:


Encoding- Your ZAVIO network camera can encode video in two different formats.

H.264 is the most advanced and efficient codec delivering excellent image quality and a small video stream size at the same time. Normally, this is your preferred choice. However, you can also select MJPEG, e.g., for compatibility reasons.

Profile- Encoding application offers you three choices- High, Main and Baseline profiles.

Resolution- Here you define the video resolution for the profile. Which choices you have depend on your camera model. Some HD models offer image resolutions of up to 1920 x 1080 pixels whereas standard definition cameras are limited to 640 x 480 pixels.

Maximum frame rate- Type in the number of frames the camera should generate per second of video. The higher the value, the smoother the video, but the more bandwidth

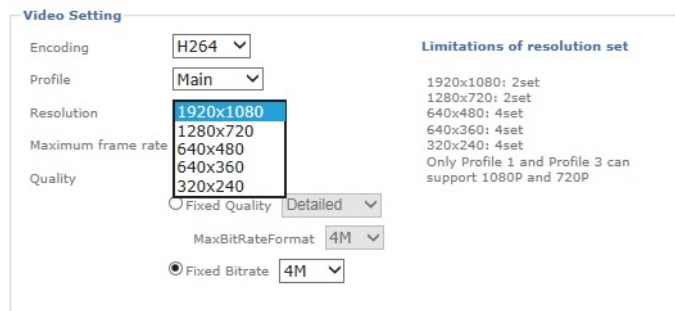

is going to be required. Valid entries are 1 to 30.

Quality- You can control the image quality of the video by selecting “Fixed Quality”(or refers to VBR) and defining the image quality by selecting one of the following values “Medium,” “Standard,” “Good,” “Detailed” and “Excellent.” Or you can choose to specify the bit rate (fixed bitrate or CBR) of the video the camera must not exceed. In this mode the camera varies the image quality automatically to not exceed the specified maximum. With setting fixed quality plus maximum bitrates, the camera would try to meet the quality requirement without exceed the certain bitrates.


Audio Setting:

Audio Steam- You can select “On” or “Off”

Audio Setting

Audio Stream	On ▾
Current Audio Setting	
Audio Mode	Full Duplex
Audio Input	0db / g.711_u-law
Audio Output	6db

5.4.3 Day/Night

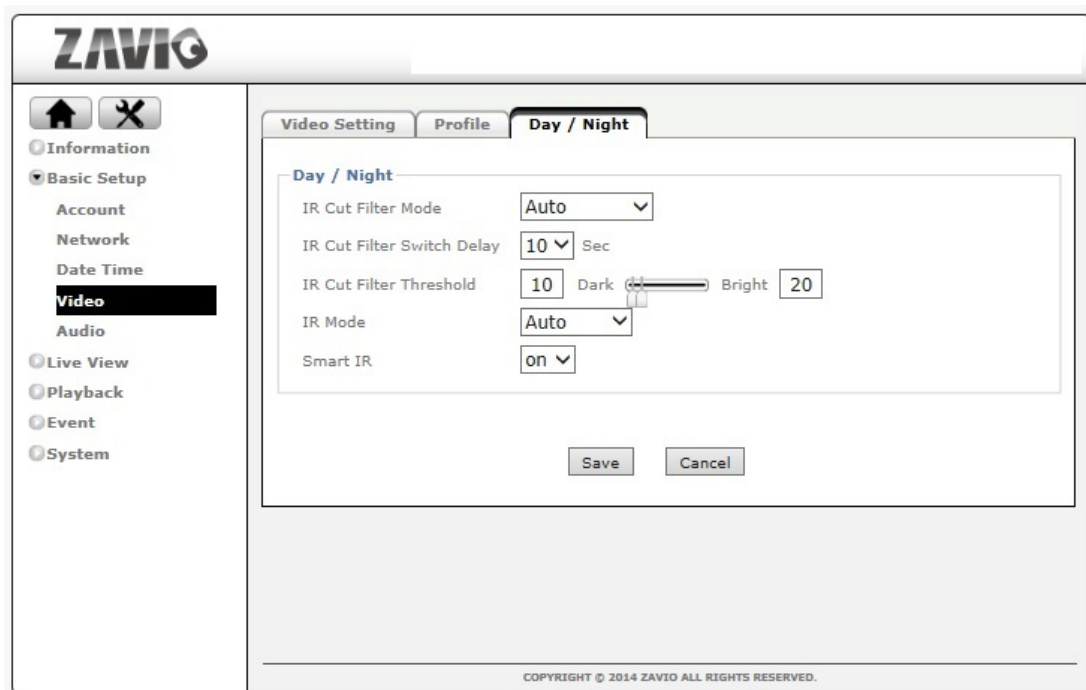

Some ZAVIO network cameras are equipped with active IR LEDs providing the ability to capture video in complete darkness. Note, that if your camera is not equipped with IR LEDs, this menu will not be available. Also note that some menu items will vary depending

on your camera model.


Infrared cut-off filters are designed to reflect or block mid-infrared wavelengths while passing visible light. They are often used in network video cameras to block IR due to the high sensitivity of many camera sensors to near-infrared light. With the filter in place before the image sensor, the camera will not be able to pick up IR light, but it generates true color video. Once the IR cut filter is removed, the camera becomes IR light sensitive and will generate a black and white image – and it does that even in complete darkness if the IR LEDs are active.

Day/Night:

IR Cut Filter Mode-

Auto-- The camera decides when to remove the IR cut filter based on the IR Cut Filter Threshold you can specify. The switch delay ensures that the camera only switches the IR Cut Filter after the specified amount of time has passed.

IR Cut Filter Mode

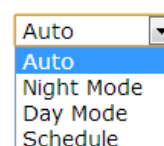

Night Mode-- This is the opposite of the day mode. If this mode is enabled, the camera always removes the IR cut filter. As a result, the camera will always be IR sensitive, regardless of the actual light levels, and the image will be rendered in B/W mode. Using night mode in day light conditions is not recommended as it leads to a poor image quality with false and washed out colors.

Day Mode-- In this mode the camera does not remove the IR Cut Filter from the image sensor regardless of any other settings. So only visible light will pass through and the image will be in color mode

Schedule-- Select this option, if you wish to control exactly when you want the camera to engage the night mode. You can use the internal scheduler to define a time pattern for each day of the week, e.g., no night mode on the weekends, but night mode from MON to FRI from 21.00 hours to 06.00 hours. The scheduler is explained in detail later on.


IR Cut Filter Switch Delay- For user to define the time duration (how many seconds) between IR being turned on or off from the current status.

IR Cut Filter Threshold- Here we use an example to explain how IR cut filter threshold works. If you set Dark as 30 lux and Bright as 70 lux, that means when luminance is less than 30 lux, the camera switches to night mode(B/W), and when luminance is more than 70 lux, the camera switches to day mode(color), if the luminance is between 30 lux and 70 lux, the camera stays in current mode.

IR Mode-

Auto-- This ensures that the IR lights go on whenever the IR cut filter has been removed.

IR Mode

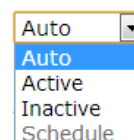

Active-- Keeps the IR LEDs illuminated


regardless of the state of the IR cut filter. To ensure maximum life of the IR LEDs, this option shouldn't be used, unless your camera is installed in a dark environment which requires IR lighting at all times.

Inactive-- When this is selected, the camera will never activate its IR LEDs, even if the night mode is enabled (the IR Cut Filter has been removed). If you have your own 850nm IR lighting in place already, then you will not need to use the camera's integrated IR LEDs and can therefore turn the IR LEDs off.

Schedule-- Select this option, if you wish to control exactly when IR LED turning on and off by following a certain schedule setting

Smart IR- The technology is to avoid overexposure problem happened. When the object comes closer or farther in the field of view, Smart IR technology will automatically adjust the level of IR intensity and make sure the object is definitely captured by the IP Camera.

5.5 Audio

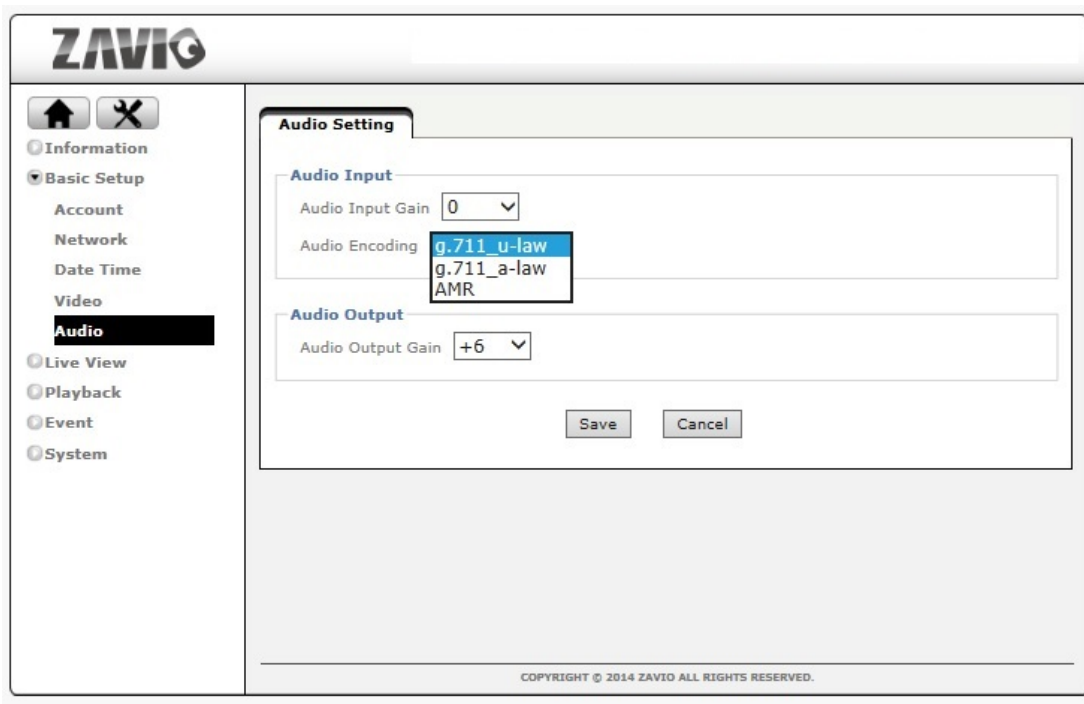

Audio Input:

Audio Input Gain- Select the microphone input gain value you wish in the drop-down menu, and based on your region to select the proper codec and save all setting.

Audio Encoding-

g.711 u-law-- One codec for "Computer Audio", used in North America & Japan areas.

g.711 a-law-- Another codec for "Computer Audio", used in Europe and the rest for the world.

AMR-- An audio codec of the third generation communication for mobile PHONE. While the option selected, your mobile phone will receive the audio file from IP Camera. And you can choose the bit rate from 4.75k to 12.2k. However, the usage of this codec will cause frame-rate decreasing.


Audio Output:

Audio Output Gain- Select the speaker output gain value you wish in the drop-down menu and save it.

Note: The camera does not support echo cancelling, using the full duplex mode may cause audio feedback.

6. Setting Live View

The Live View menu provides access to the video settings, which are exactly the same as described in the last section 5.4 & 5.5. It also provides access to advanced image settings and allows configuring the view areas that we discussed in the previous section. Note that depending on your camera model, the options on the screen may differ from the screen shots in this user manual.

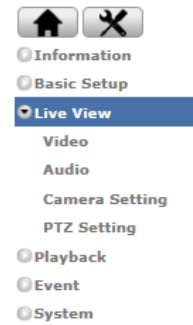


6.1 Video

The same as described in the last section 5.4.

6.2 Audio

The same as described in the last section 5.5.

6.3 Camera Setting

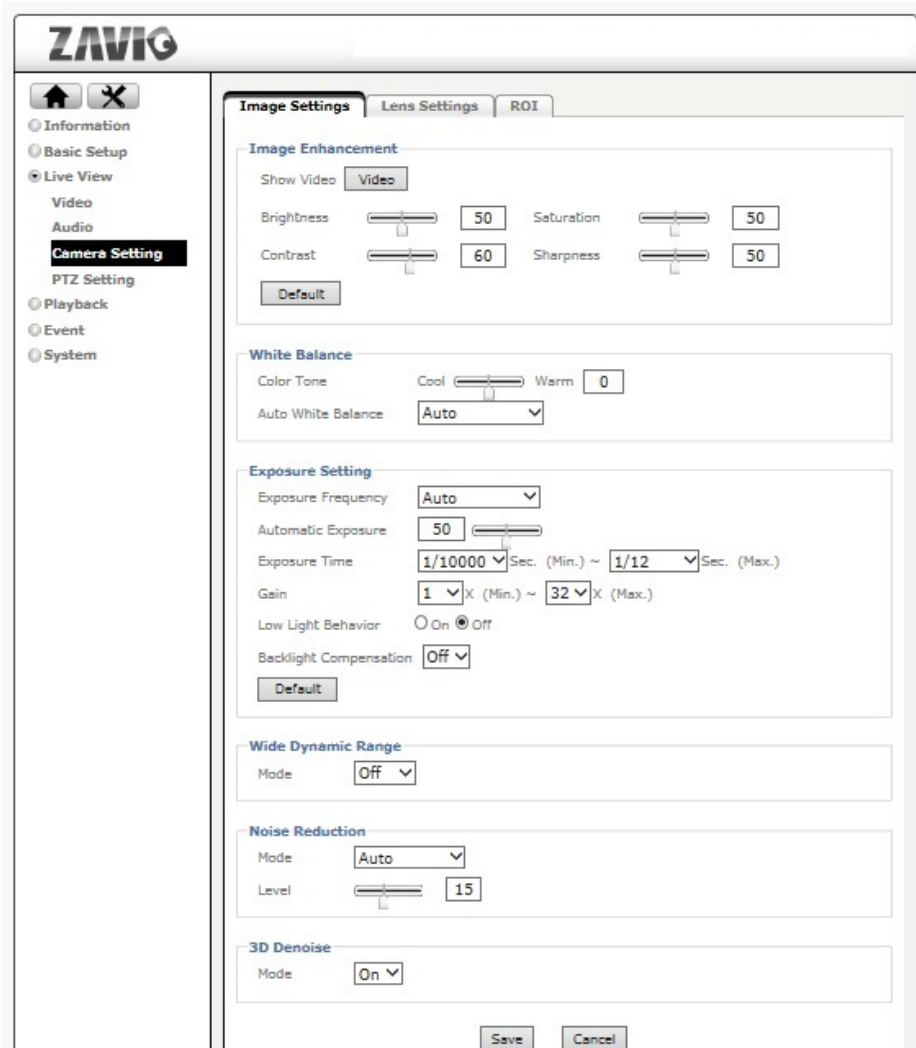

6.3.1 Image Setting

Image Enhancement:

The image enhancement controls consist of standard video settings, which you know from a great variety of products. Click on "Video" to see the camera live video while you adjust the settings to your liking.

White Balance:

Color Tone- Choose between "Cool" and "Warm". Normally you want to set this to real as it provides the best representation of natural colors.

Auto White Balance- This parameter controls how the camera interprets colors. You can choose from the following values: "Auto," "Hold Current", "Fluorescent," "Incandescent," "Sunny," "Cloudy", "Sun Shade" and "Manual" You should select the value that best represents the environment the camera is installed in. You can also leave the default value "Auto," as it typically delivers very good results.

Exposure Setting:

Exposure Frequency- There are four values: "Auto," "50Hz," "60Hz" and "Hold Current." If your camera is installed so that it's facing outside, you should select "Auto." If your camera is installed indoors, you must select the appropriate light frequency (either 50 or 60 Hz; e.g., in the US select 60 Hz, in Germany, Poland or Italy select 50 Hz). The hold current option fixes the current exposure settings.

Automatic Exposure- You can manually set the exposure value, which ranges from 0-100 (dark to bright). The default value is 25 and typically provides good results.

Exposure Time- You can define the minimum and maximum exposure time of the camera's shutter here. We recommend using the smallest exposure time (e.g., 1/10000 sec) for the min value as it ensures the camera will generate crisp images during day time conditions in which even moving objects appear sharp and in focus. As for the max value, the bigger the value, the longer the camera keeps the shutter open in low light conditions allowing more light to fall onto the image sensor. As a result, the camera can capture images even in very dark environments. The downside is that moving objects will appear blurred as they move while the camera's shutter is open.

Gain- The ZAVIO camera is equipped with an electronic gain mechanism which helps capture image in dark conditions. The higher the gain, the brighter the image, but the downside is that the image contains more noise.

Low Light Behavior- When enabled, this option allows additional control over the camera when it is running in night mode.

Backlight Compensation (BLC)- In images where a bright light source is behind the subject of interest, the subject would normally appear in silhouette. BLC allows the camera to adjust the exposure of the entire image to properly expose the subject in the foreground. The resulting image may appear overexposed in the background; however,

the object of interest is now properly lit.

White Dynamic Range:

WDR stands for Wide Dynamic Range and allows the ZAVIO network camera to capture video in areas with high contrasting objects; e.g., extremely bright and extremely dark. Activate WDR by setting it to “Auto” and then adjust the level that controls the amount of WDR enhancement.


Noise Reduction:

Your ZAVIO camera features a noise reduction algorithm, which helps reduce the graining in the video, which occurs under low light conditions. Set this parameter to “Night Mode” to only activate noise reduction when the camera is operating in night mode. You can also select “Schedule”, “On” (activates noise reduction permanently) or “Off” (deactivated noise reduction permanently).



3D Denoise:



Improves video noise reduction to deliver sharper, more accurate images.

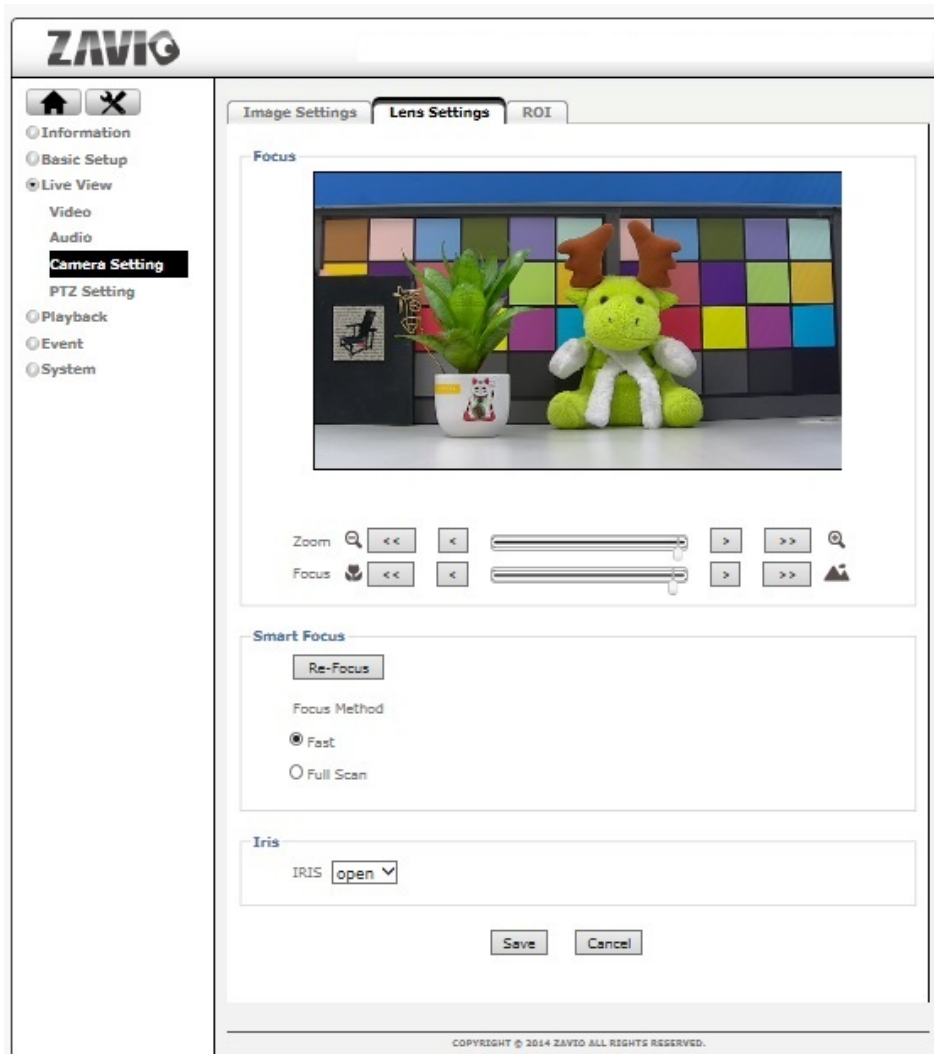6.3.2 Lens Settings



Focus:

Zoom- You can click  to zoom in or click  to zoom out to your desired scene.

Focus- You can select to have the camera focused near or far. Click  to focus on objects closer to the camera. Click  to focus on objects further away from the camera. Or you can set Smart Focus below to let the system decide the focus point for you.

Smart Focus:

Select focus method and click re-focus button, and then the optimal focus value will be set automatically.


Fast- Quick focus for small area scanning.

Full scan- Scan for whole region to find the best focus point.

Iris:

You can select open & close

6.3.3 ROI

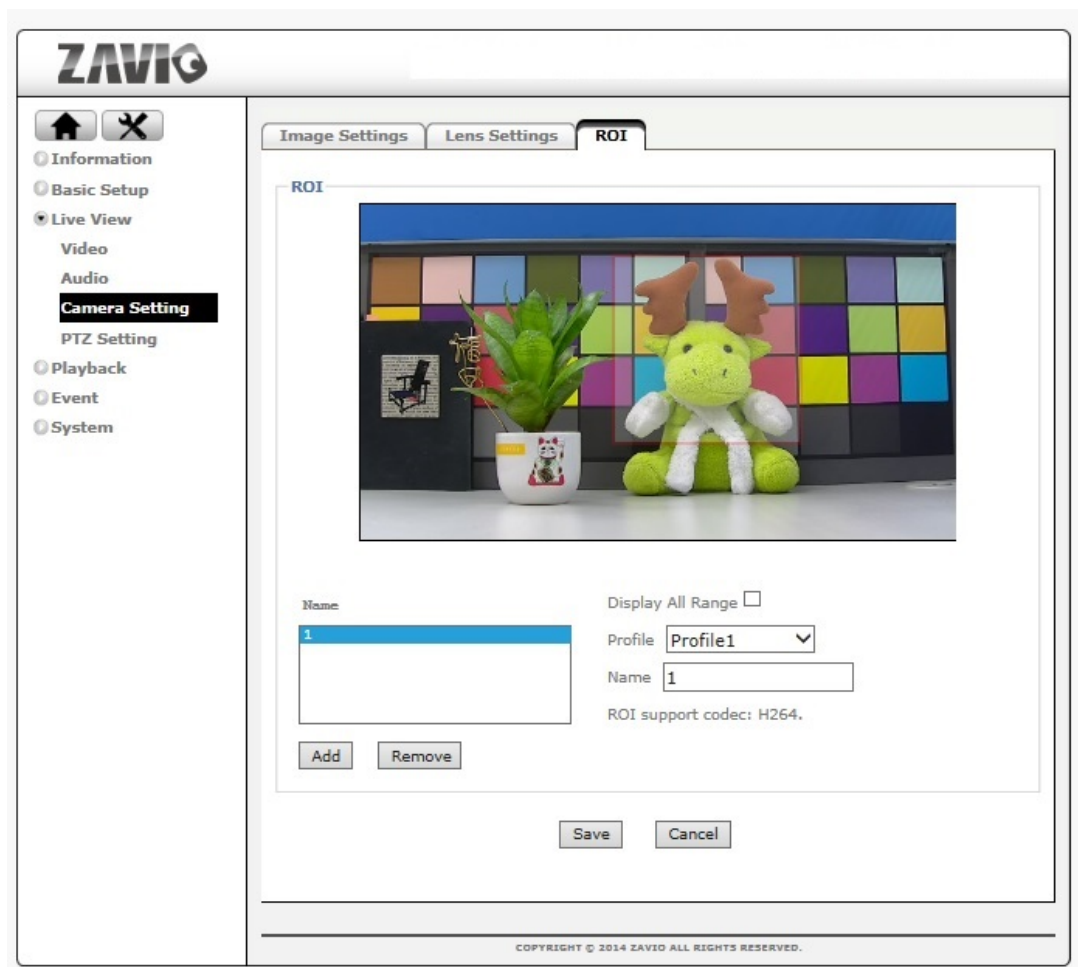


ROI:

ROI is an application for strengthening the image clarity in key regions of a scene. Please refer to the picture below. The framed regions are clearer than the other region. First, please fill in a name and click add, and then you'll see a rectangle frame on the live-view screen. Select a region which you want the view to be clearer, and then click save. If you want to see the regions you have set, please click Display All Range.

Note: For each profile, the ROI sets are limited to 3, and ROI only support codec H.264.

6.4 PTZ Setting

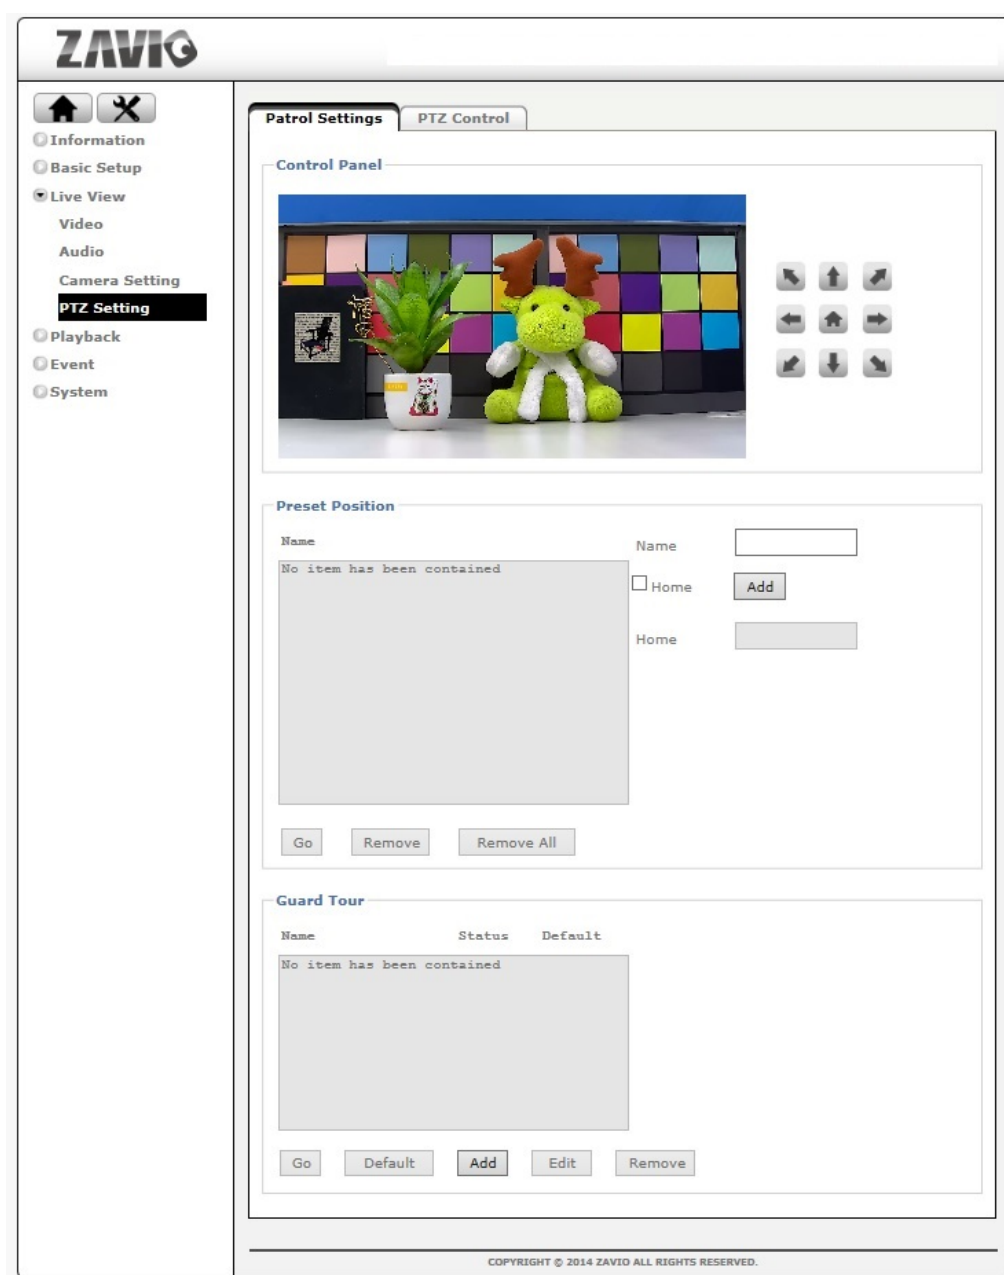

ZAVIO

Home Settings

- Information
- Basic Setup
- Live View
- Video
- Audio
- Camera Setting
- PTZ Setting**
- Playback
- Event
- System

Patrol Settings **PTZ Control**

Control Panel

No item has been contained

Name Name

Home

Home

Guard Tour

Name	Status	Default
No item has been contained		

COPYRIGHT © 2014 ZAVIO ALL RIGHTS RESERVED.

You may set the speed of digital pan/tilt zoom, and also speed for preset/patrol. The range goes 1-100 (slow to fast)

6.4.1 Patrol Settings

Control Panel:

PTZ control panel to go to the direction you want.

Note: Before operating this function, you must set the resolution beneath 1920x1080, and move your view area to your desired position.

Preset Position:


Name your every position and click "Add", you can click "go" to make sure if the preset position has been written in.

Guard Tour:

Click "Add", name the tour first then add in the preset position you desired to form the tour.

You can manually set the PTZ speed and the interval time.

6.4.2 PTZ Control

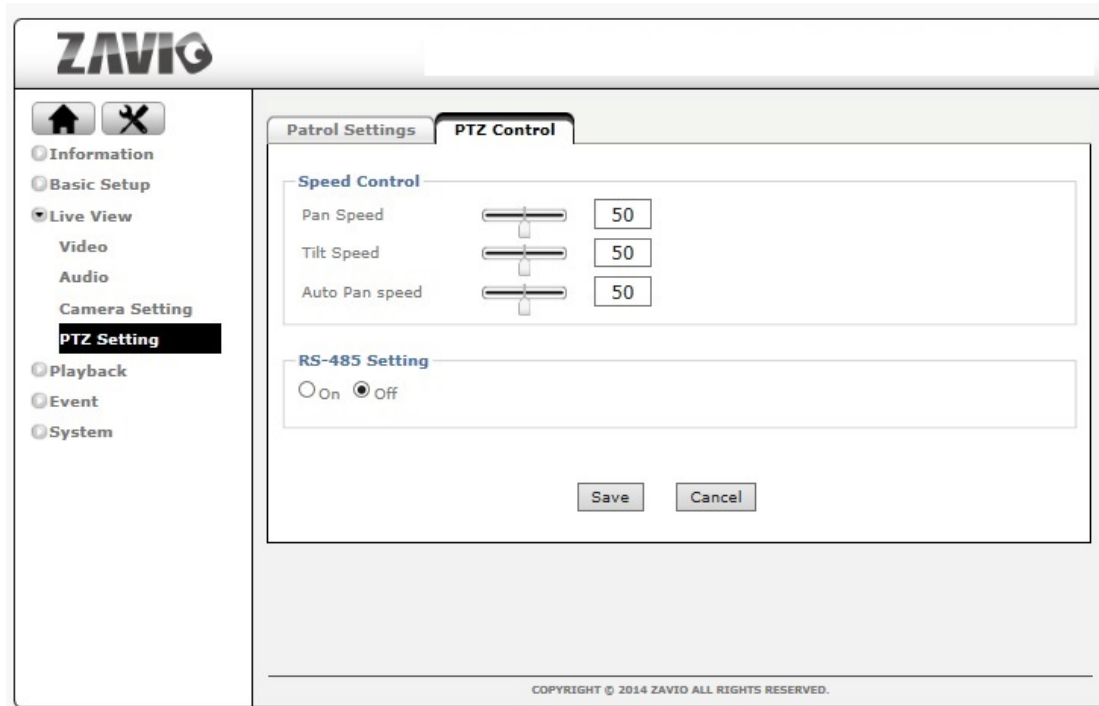

Speed Control: With higher speed, the camera would move faster.

Pan Speed- from 1 to 100


Tilt Speed- from 1 to 100

Auto Pan Speed- from 1 to 100

RS-485 Setting: on or off


7. Setting Playback

The ZAVIO network camera offers an integrated playback feature, from a network storage server or the optional SD storage card.

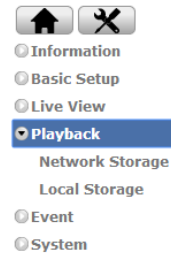


7.1 Network Storage


In the event settings (see section 8) you can define a local network storage drive (NAS) as a location for the camera to save videos. The video player allows locating recordings quickly and conveniently on the network storage drive and play back the files right in your web browser.

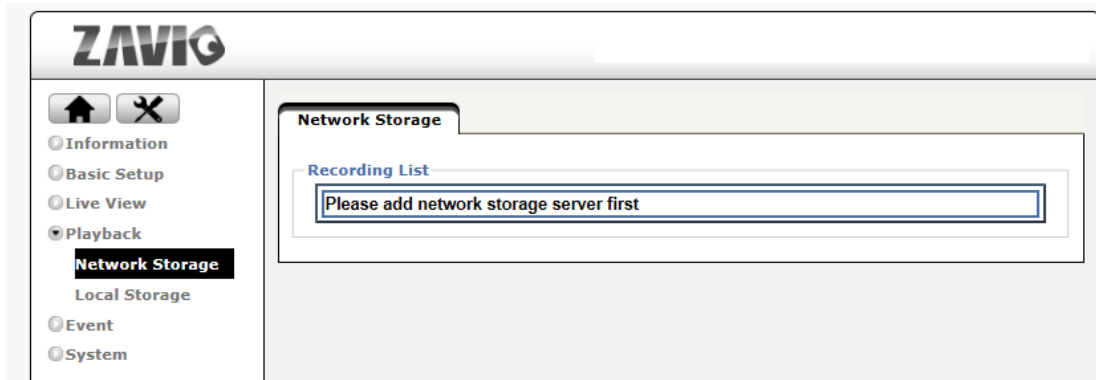

There are two folders: "Event" which is for event-triggered recordings, e.g., motion detection alerts, and "Schedule" which contains recordings that the camera recorded if scheduled recording is enabled.

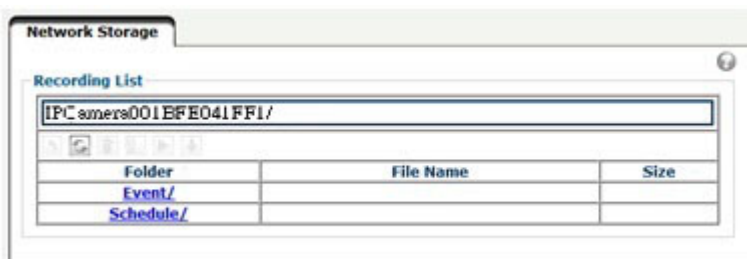

Refer to the section 8 "Event" for more details on the setup.

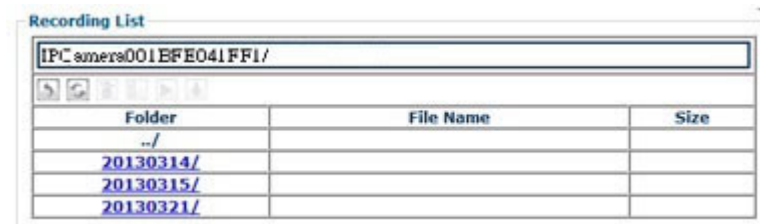

Above: Each day has its own folder.

Recording List

IPCamera001BFE041FF1/

Folder	File Name	Size
../		
13/		
14/		
16/		
17/		
18/		
19/		
22/		

Above: Each hour of the day has its own folder.

Recording List

IPCamera001BFE041FF1/

Folder	File Name	Size
../		
	551397_video20130314175349_MD.avi	5.01MB
	551397_video20130314175449_MD.avi	5.01MB


Above: Individual videos can be played back by selecting them and clicking the play button.



Above: Playback of one event recording in the web browser (MSIE only).

Item	Description
	Move one folder up
	Refresh the view
	Delete the selected file
	Select all items in the folder
	Playback the selected video
	Download selected item to your computer's hard drive.

7.2 Local Storage

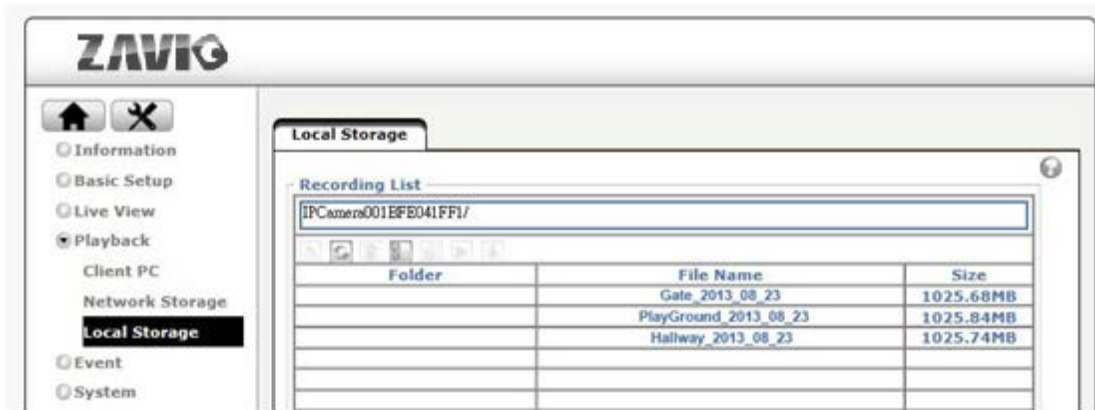


If your camera is equipped with a local storage option (recording on an SC card) you can access the recordings from here. It functions similarly to the access of files on the network storage device.



8. Setting Event


Your ZAVIO network camera supports so-called events. When an event occurs, you can have the camera perform an action, e.g., record a video to a remote location. This section describes how to set up event servers, events, motion detection and the scheduler.

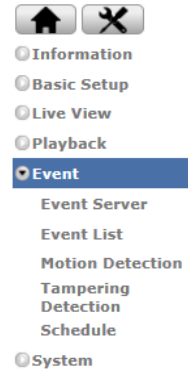

8.1 Event Server

First you need to set up an event server, or multiple event servers.

8.1.1 Event Server

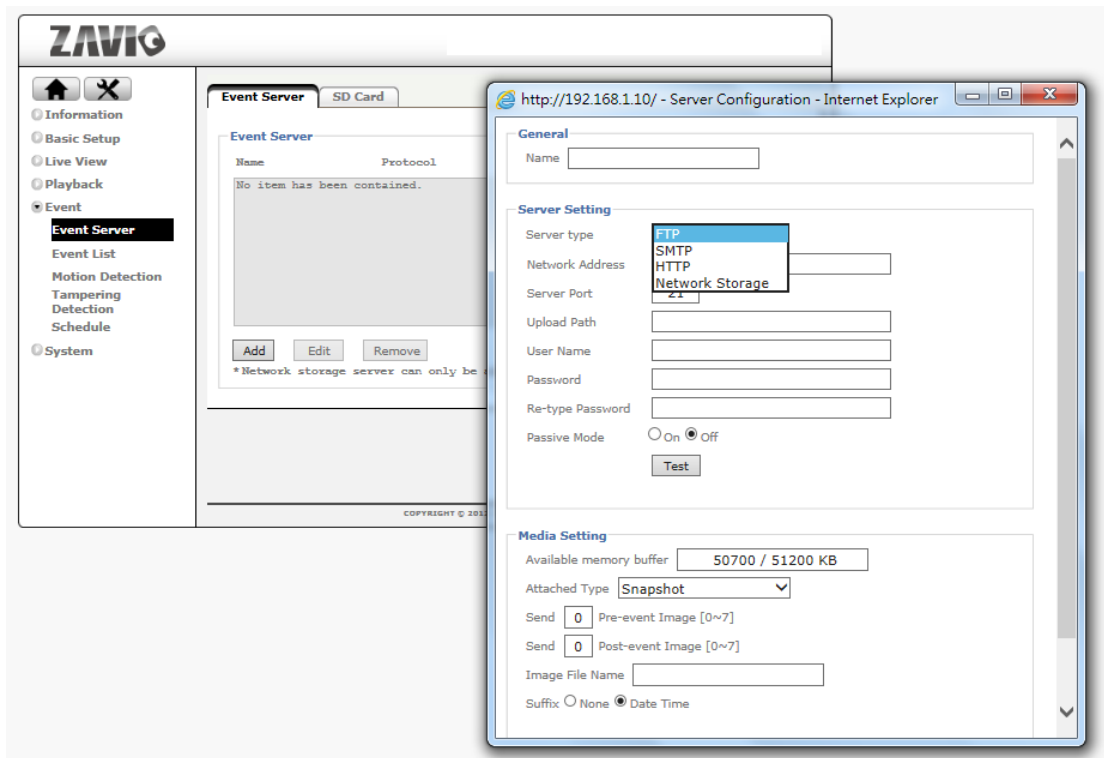

Click "Add" to create a new event server.

Add a FTP Server


General:

Name- Provide a name for the server.

Server Setting:

Server Type- Select "FTP"

Network Address- Type in the address of

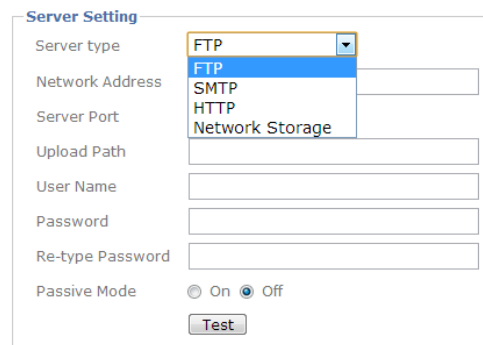

your FTP server.

Server Port- Leave at 21, unless your FTP server uses a different port.

Upload path-upload path

User Name and password- Provide valid login credentials for the FTP server.

Re-type Password-type password again

Passive Mode- Select "On" if your FTP server utilizes passive FTP, which is the most common method.

Test- Press on Test button to make sure the FTP server information is all correct.

Add a SMTP Server

Server Setting:

Server Type- Select "SMTP."

Mail Server- Type in the address of your mail server.

Server Port- Adjust the server port if necessary. Port 25 is standard, but your server may be using different values (not so uncommon these days as an anti-spam measure).

Authentication- If your mail server requires authentication

in order to send email, and most servers do these days, set authentication to "On" and define the type of authentication below.

User Name and password- Provide valid login credentials for the email server.

Send mail from- The camera will use this address as its own email address. This email address does not necessarily need to be a valid address.

Send test email to- Enter the email address to which you want the camera to send the images and click on Test. If the test succeeds you can provide the information for the media settings and click "Save". The actual target email address is defined when you set up an event in the next section.

Add a HTTP Server:

A HTTP server can be used by the camera to trigger a script on a remote server if an event occurs. User name, password and proxy fields are all optional.

The screenshot shows the 'Server Setting' form for an SMTP server. The 'Server type' dropdown is set to 'SMTP'. The 'Mail Server' field is empty. The 'Server Port' is set to '25' with a range '(1~65535)' and an 'SSL' checkbox. The 'Authentication' is set to 'On'. The 'Send mail from' and 'Send test mail to' fields are empty. A 'Test' button is at the bottom.

The screenshot shows the 'Server Setting' form for an HTTP server. The 'Server type' dropdown is set to 'HTTP'. The 'URL' field is 'http://' followed by an empty input box. The 'Port' is set to '80'. The 'User ID', 'Password', 'Re-type Password', 'Proxy Address', 'Proxy Port', 'Proxy User Name', and 'Proxy Password' fields are all empty. A 'Test' button is at the bottom.

Adding a Network Storage:

Server Type- Select "Network Storage."

Type- Select a valid type for your network storage (either Windows SMB or Linux NFS).

Network Storage

Location- Enter the address of your local storage server as shown on the right.

The screenshot shows a 'Server Setting' form with the following fields and values:

- Server type: Network Storage (dropdown)
- Type: Windows Network (SMB/CIFS) (dropdown)
- Network Storage Location: (empty text box)
- (for example: \\my_nas\folder)
- Workgroup: (empty text box)
- User Name: (empty text box)
- Password: (empty text box)
- Re-type Password: (empty text box)
- Create Folder: (empty text box)
- Test: (button)

User Name and password- Provide valid login credentials for the network storage server.

Create Folder- Type in a folder name in which you want the camera to store files. This field is optional.

Test- Press on Test button to make sure the NAS information is all correct.


Media Settings:

Here you define what kind of media you wish to upload (snapshot, video), how many images pre and post event you wish to upload, the image file name and the suffix.

The screenshot shows a 'Media Setting' form with the following fields and values:

- Available memory buffer: 20480 / 30720 KB
- Attached Type: Video (dropdown)
- Pre-event Recording: 0 seconds [0~7]
- Post-event Recording: 1 seconds [1~7]
- Image File Name: (empty text box)
- Suffix: None Date Time

8.1.2 SD Card

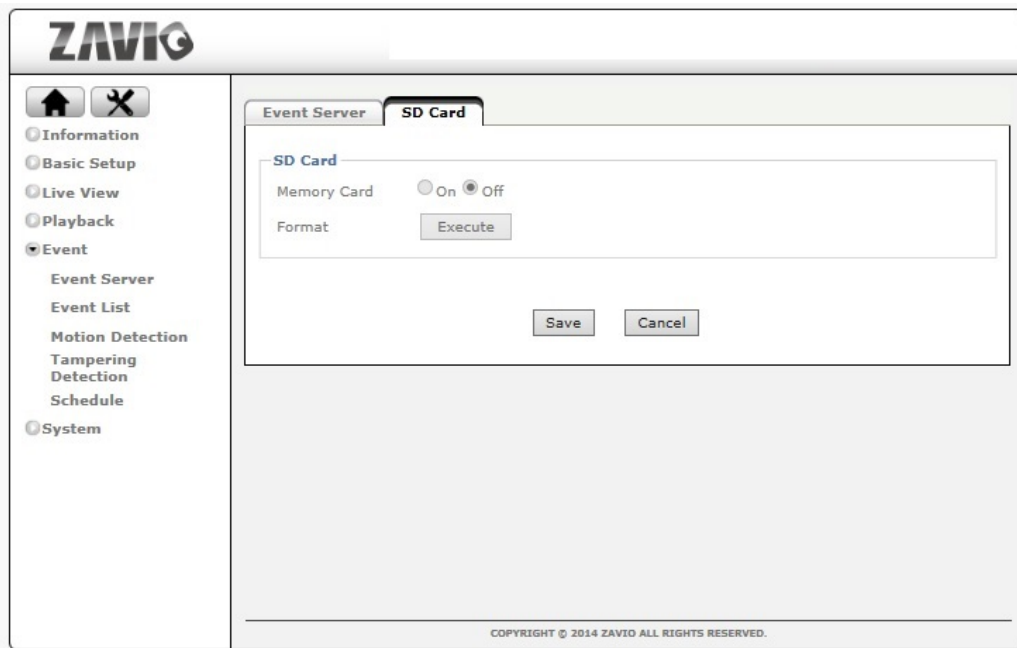

If you want to record video footage on a local SD card, you first must insert the SD card (see hardware installation guide for details), and then you must set the Memory Card to “on” and format the card by clicking “Execute.”


Noted: Only FAT32 is supported, please do not format the SD card to other format.

Noted: Please power off the camera before taking off memory card.

8.2 Event List

Now that we have created an Event Server, we can proceed with setting up actual events.

8.2.1 Event List

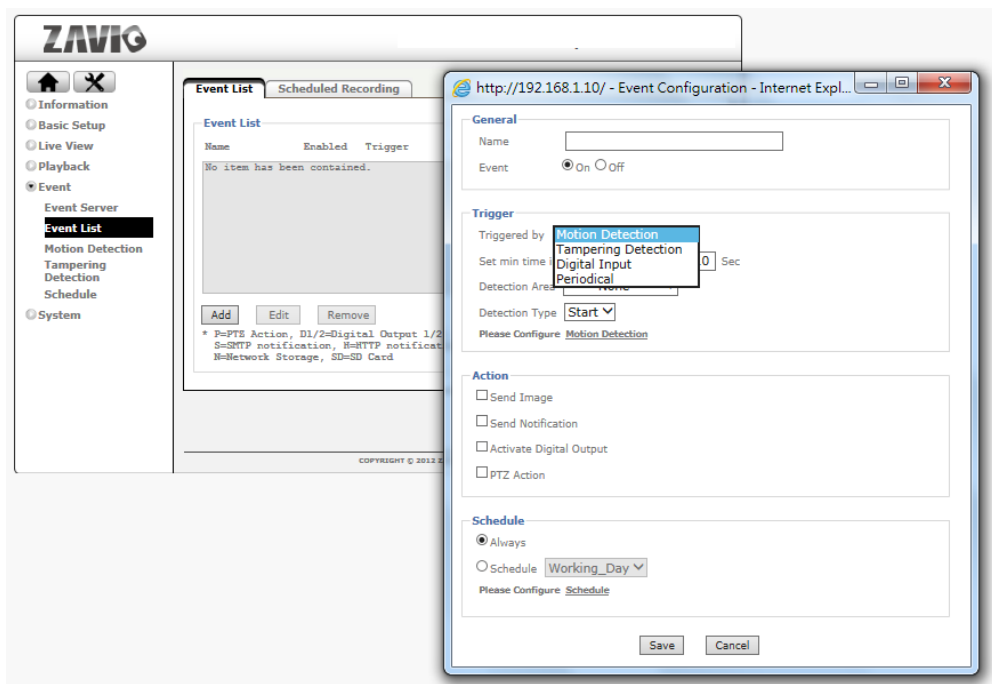


Click on the "Add" button to begin.

Trigger:

You need to specify the trigger type.

The drop-down list below shows the available options. Note that depending on your camera model, the options will vary.

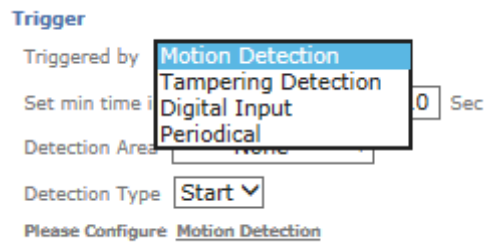

Motion Detection- The camera monitors the video image for movements and triggers an alert when it detects motion. Motion detection needs to be configured first for that to work.


Tampering Detection- The camera can detect if it's being tampered with, e.g., if someone covers the lens, and triggers an alert when this happens. Tampering detection needs to be configured for that to work.

Digital Input- If your camera is equipped with digital inputs (see hardware installation guide), then you can use them as a trigger mechanism. A common example would be to use 3rd party motion detection sensors that trigger the camera to start a recording.

Periodical- This trigger type can be used if you want the camera to perform the same action over and over again, based on a time period. A typical application would be to have the camera refresh an image on your web site every 60 seconds.

Action:

After you have selected the tripper type, you now have to define the action(s). In other words, what do you want the camera to do if the event occurs?

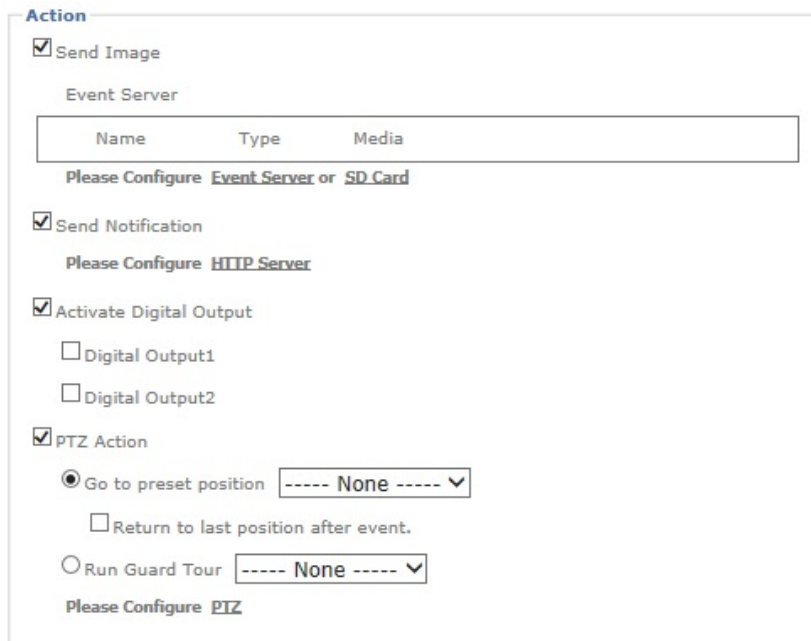

Send Image- Instructs the camera to send out images. When selected, you need to specify whether you want to use FTP, network storage or SD card. You may need to set

up these servers first (see previous section) in order to use them here.

Send Notification- This action type uses the HTTP event server. You can use this to have the camera trigger a script on a server.

Activate Digital Output- If your camera is equipped with digital outputs, then you can use them to perform an action. You can specify how long you want the camera to trigger the event once you have selected Digital 1.


PTZ Action- This action type will make the camera to move to/point at a certain preset position or start run a certain predefined tour when the event occurs.

Schedule:

Here you can define when you want this action to be active. You can choose between "Always" or a schedule that you have defined (see "Schedule" a few pages down).

The screenshot shows a configuration window titled "Schedule". It contains two radio buttons: "Always" (which is selected) and "Schedule". Next to the "Schedule" radio button is a dropdown menu currently showing "Working_Day". Below these options, there is a text prompt: "Please Configure [Schedule](#)".

8.2.2 Scheduled Recording

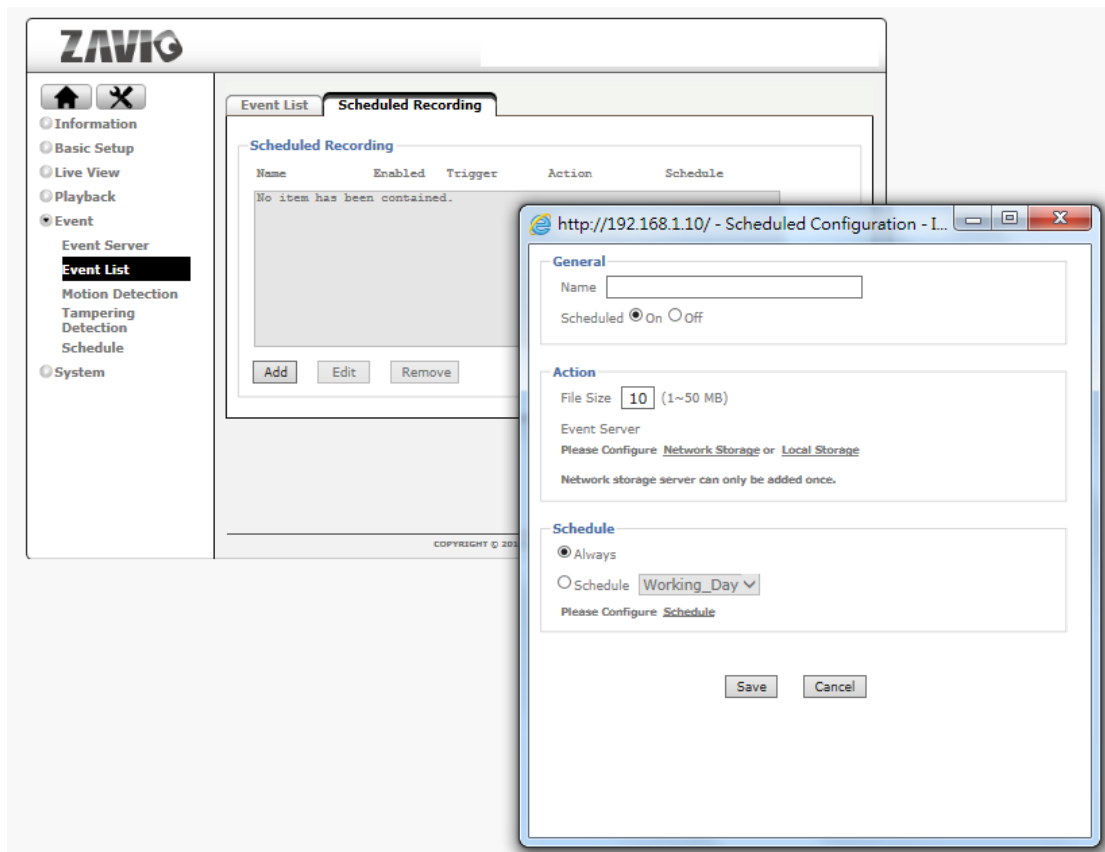

Schedule Recording:


This feature is allowing the camera to record the video by following a certain schedule such as always record or record the video during the weekend.

Action:

Define each recorded video **file size** to save.

You can choose to store the video to NAS or SD card, which need to be pre-configured in event server.


8.3 Motion Detection

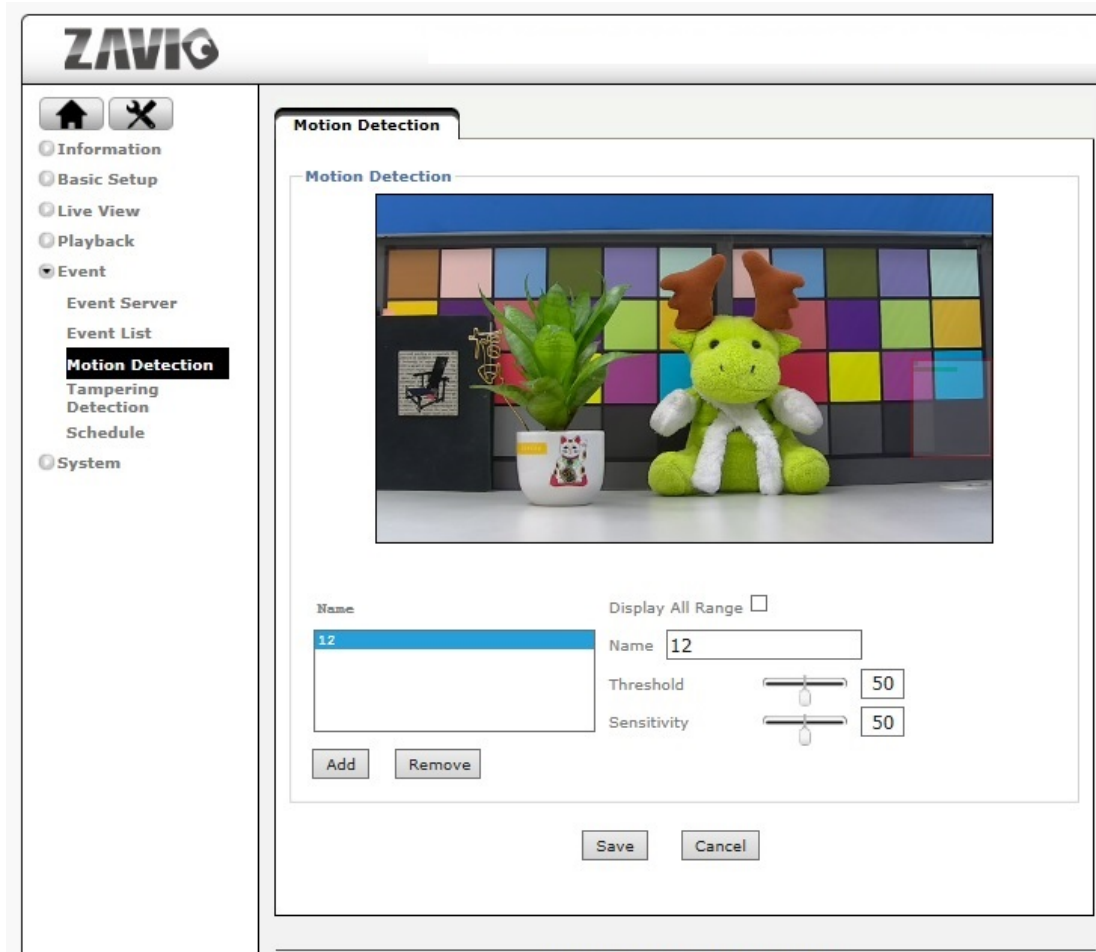

The ZAVIO network camera is able to monitor the video footage for movements and trigger an alert if motion has been detected. This motion detection does not utilize passive infrared, but instead it relies on a frame by frame comparison of the video footage the camera captures. You can define more than one motion detection area. The example above shows that so-called hotspot has been created for the area of the window. When you set up an event for motion detection, you can select which motion detection area you wish to monitor. Threshold and sensitivity will need to be set up so that you don't miss important events and are not flooded by false alarms either. Finding the right values will require some trial and error. There are no standard values that simply "will work" as it depends very much on the actual location and light levels. Generally speaking, increasing the sensitivity while lowering the threshold will generate more false alarms but it ensures that you will not miss an important event. Doing the opposite will of course have the opposite effect: Fewer false alarms at an


increased risk or missing an important event.

8.4 Tampering Detection

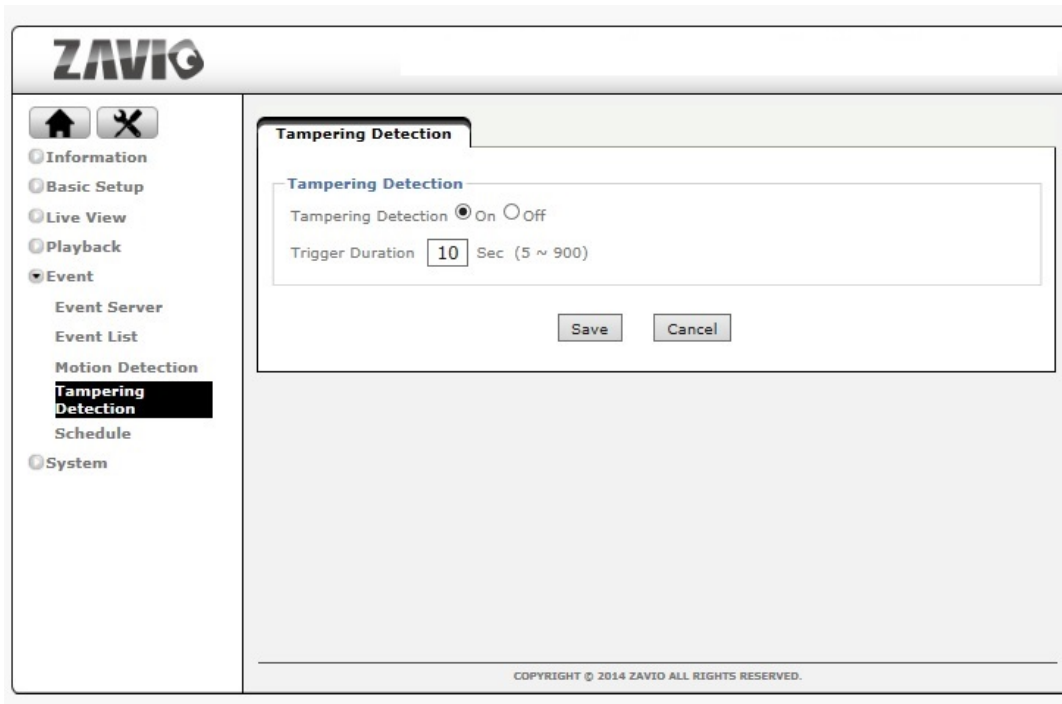

If the image of the camera is obstructed, e.g., because someone covers up the lens or moves the image out of focus, the camera notices this and generates a trigger alert. You can define how long you want the alert state to remain active after the event has occurred.


8.5 Schedule

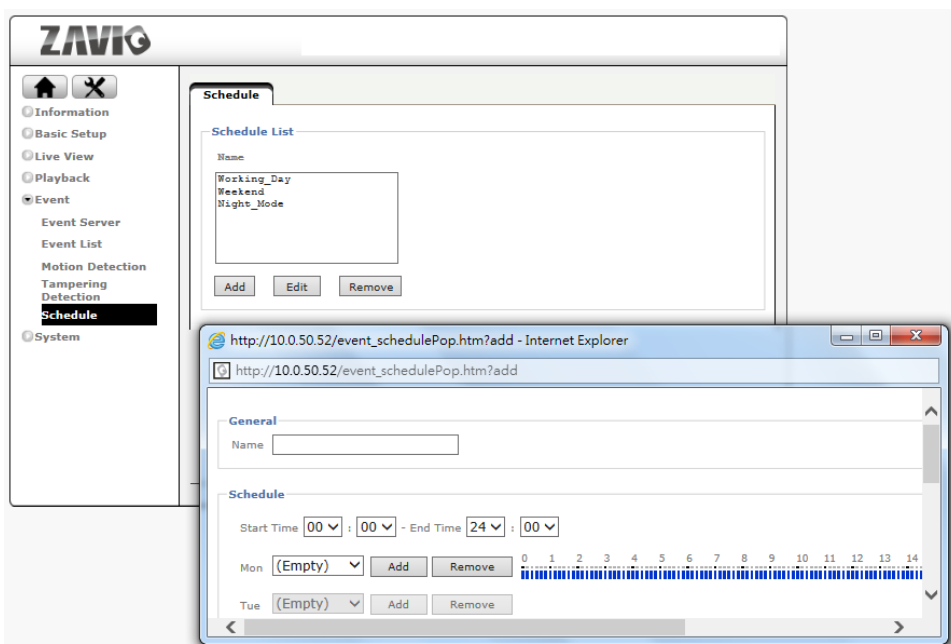

The Network Camera supports event trigger actions that can be based on a schedule. This can


be used, as an example, to only activate motion detection between 9 pm and 6 am during business days and around the clock on the weekends. You can set up individual schedules for each event type, so that motion detection is activated between 7 pm and 7 am, but tampering detection is only activated between 10 pm and 4 am.

Depending on your camera model, the screen layout will vary slightly.

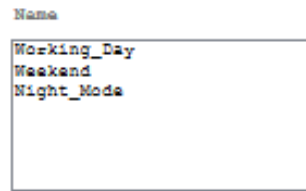

There are three default schedules which you cannot delete, but you can modify them.

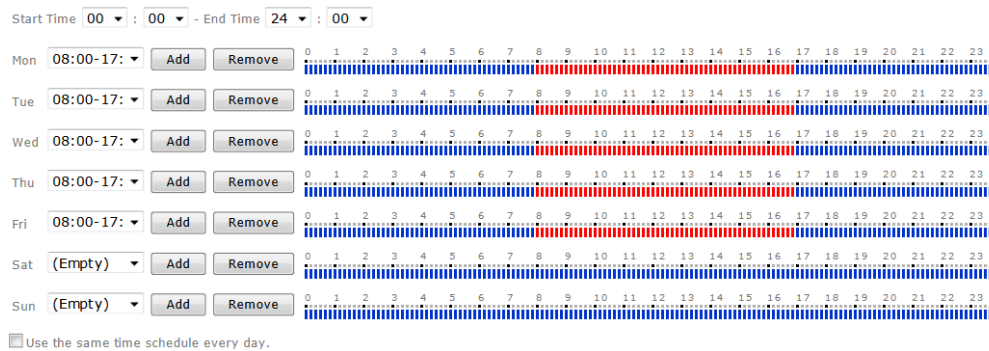

You can create a new schedule by clicking "Add."




First you need to provide a name for the schedule (not shown on image). Then select a start and end time and click on "Add" for the day of the week the schedule is supposed to be active. As soon as you add a schedule, the timeline turns red, indicating the active schedule. If the schedule is the same for every day of the week, you can activate the option "Use the same time schedule every day."

9. Setting System

The system menu provides access to a variety of system settings of your ZAVIO network camera.

-  
- Information
- Basic Setup
- Live View
- Playback
- Event
- System**
 - Maintenance
 - Date Time
 - Security
 - Network Basic
 - Network Advanced
 - Digital I/O
 - PoE
 - LED
 - System Log

9.1 Maintenance

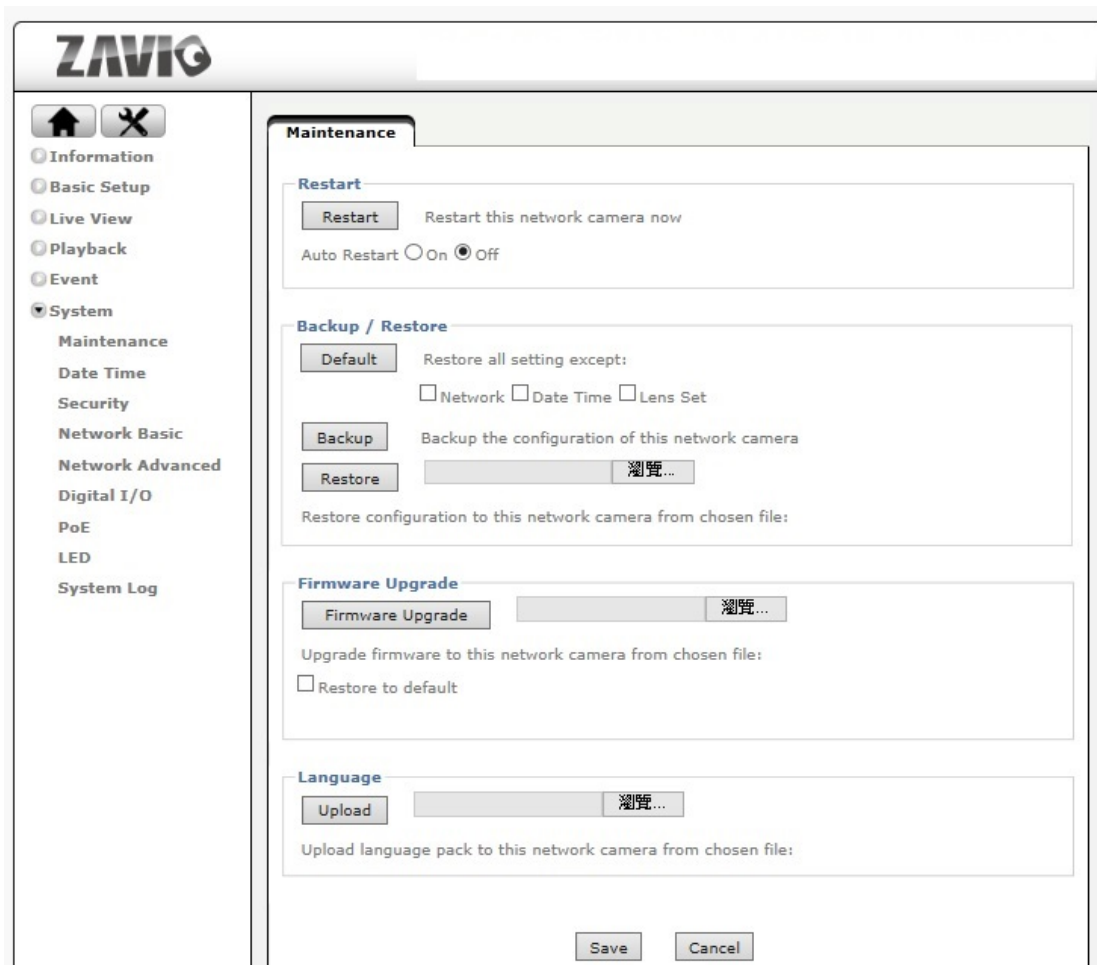


The screenshot displays the ZAVIO web interface for the Maintenance settings. The interface includes a top header with the ZAVIO logo and a left sidebar with navigation options. The main content area is titled "Maintenance" and contains several sections:

- Restart:** A "Restart" button to restart the camera now, and an "Auto Restart" option with radio buttons for "On" and "Off" (selected).
- Backup / Restore:** A "Default" button to restore settings except for Network, Date Time, and Lens Set. A "Backup" button to save the current configuration, and a "Restore" button with a file selection field and a "瀏覽..." (Browse) button. Below this is a label: "Restore configuration to this network camera from chosen file:".
- Firmware Upgrade:** A "Firmware Upgrade" button with a file selection field and a "瀏覽..." (Browse) button. Below this is a label: "Upgrade firmware to this network camera from chosen file:" and a checkbox for "Restore to default".
- Language:** An "Upload" button with a file selection field and a "瀏覽..." (Browse) button. Below this is a label: "Upload language pack to this network camera from chosen file:".

At the bottom of the page, there are "Save" and "Cancel" buttons.

Restart:

You can restart the network camera by hitting the restart button. Set Auto Restart to "On" if you wish to reboot the camera automatically, and then you specify the reboot mode. Select "Sequential mode" and specify after how many days of uptime you want the camera to reboot. Select "Schedule Mode" to control when the reboot is to occur in a much more detailed way.

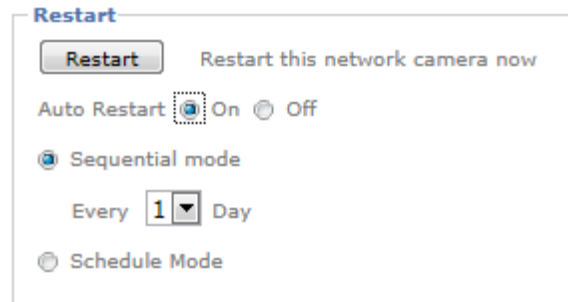

Backup/Restore:

Default- Click this button to restore the factory default settings in this camera. You can choose to exclude the IP and date & time settings.

Backup- This function allows saving the current configuration of the camera to a file on your computer's hard drive. Saving the configuration is useful in case you ever want to reload a specific configuration; e.g., in order to set up another camera of the same model and firmware version with the exact same configuration. Since the IP address configuration is also part of the setting date, you must be careful not to restore the same settings to two or more cameras when all of them are connected to the same network. Otherwise, you would be creating an IP conflict in your network.

Restore- With this function, you can reload a previously saved configuration back into your camera. Click Browse to locate the configuration file and OK to begin the process. The camera will perform a reboot at the end of the procedure and the new settings will become effective.


Firmware Upgrade:

From time to time, there will be a new firmware version available for your camera. New firmware versions can enhance the functionality of the camera, or they can fix problems. Before you begin, make sure that you have obtained a proper firmware from the ZAVIO web site. If you are not 100% sure about this, do not proceed. Instead, contact the technical support team to verify the firmware version. Also, do not perform the upgrade from a computer that is connected to the network wirelessly, as the connection is inherently less stable than a cable-based connection. If you have the correct firmware file, make sure that you un-compress the ZIP file first (if the firmware file is an archive) and you end up with a file that has an extension *.bin. Click on Browse and select the *.bin file. Click on OK to begin the upgrade process.

Language:

You can replace the language in the user interface of your network camera. On the Installation CD are different language files starting with "LNG_" and ending with ".lang." Click on Browse, select the language you wish to install and then click on OK to begin the process.

9.2 Date Time

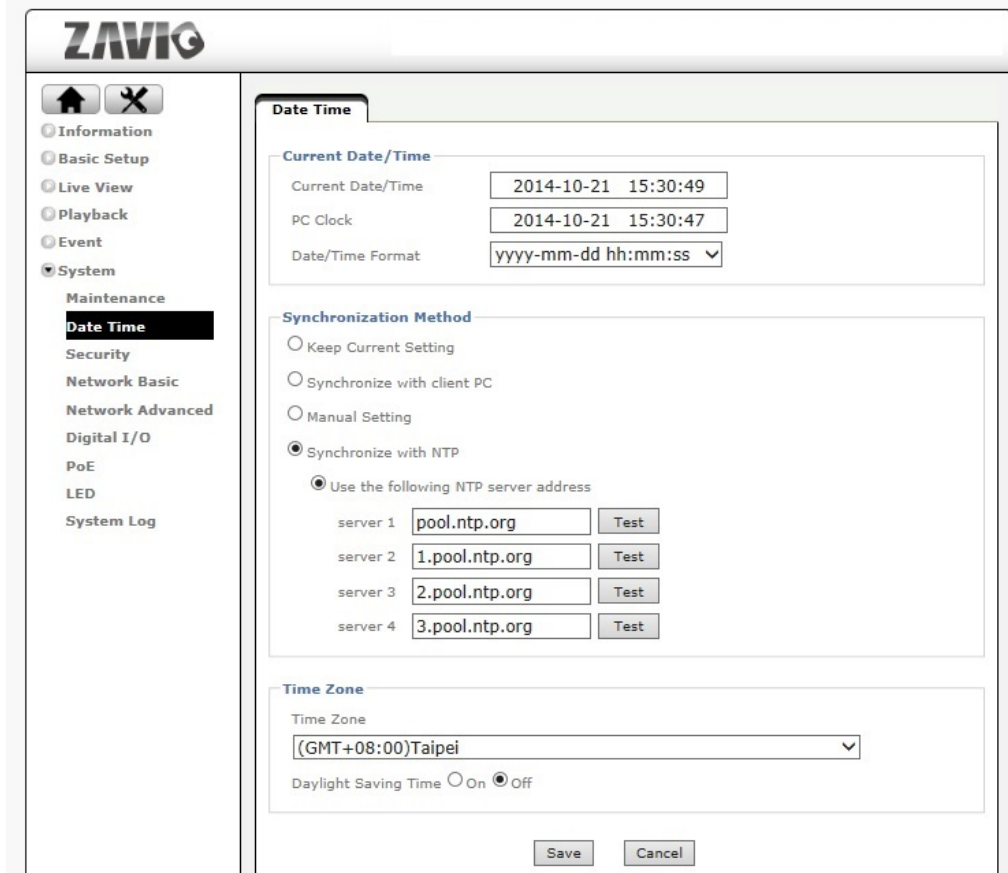

The image shows the ZAVIG web interface for configuring the Date Time settings. The left sidebar contains a navigation menu with options like Information, Basic Setup, Live View, Playback, Event, System, Maintenance, Date Time (highlighted), Security, Network Basic, Network Advanced, Digital I/O, PoE, LED, and System Log. The main content area is titled 'Date Time' and is divided into three sections: 'Current Date/Time', 'Synchronization Method', and 'Time Zone'. The 'Current Date/Time' section shows the current date and time (2014-10-21 15:30:49), the PC clock (2014-10-21 15:30:47), and the date/time format (yyyy-mm-dd hh:mm:ss). The 'Synchronization Method' section has four radio button options: 'Keep Current Setting', 'Synchronize with client PC', 'Manual Setting', and 'Synchronize with NTP' (selected). Under 'Synchronize with NTP', there is a sub-option 'Use the following NTP server address' with four server entries: server 1 (pool.ntp.org), server 2 (1.pool.ntp.org), server 3 (2.pool.ntp.org), and server 4 (3.pool.ntp.org), each with a 'Test' button. The 'Time Zone' section has a dropdown menu set to '(GMT+08:00)Taipei' and a 'Daylight Saving Time' option set to 'Off'. At the bottom, there are 'Save' and 'Cancel' buttons.

ZAVIG

Home X

- Information
- Basic Setup
- Live View
- Playback
- Event
- System
 - Maintenance
 - Date Time**
 - Security
 - Network Basic
 - Network Advanced
 - Digital I/O
 - PoE
 - LED
 - System Log

Date Time

Current Date/Time

Current Date/Time: 2014-10-21 15:30:49

PC Clock: 2014-10-21 15:30:47

Date/Time Format: yyyy-mm-dd hh:mm:ss

Synchronization Method

Keep Current Setting

Synchronize with client PC

Manual Setting

Synchronize with NTP

Use the following NTP server address

server 1: pool.ntp.org [Test]

server 2: 1.pool.ntp.org [Test]

server 3: 2.pool.ntp.org [Test]

server 4: 3.pool.ntp.org [Test]

Time Zone


Time Zone: (GMT+08:00)Taipei

Daylight Saving Time: On Off

[Save] [Cancel]

Refer to section 5.3

9.3 Security

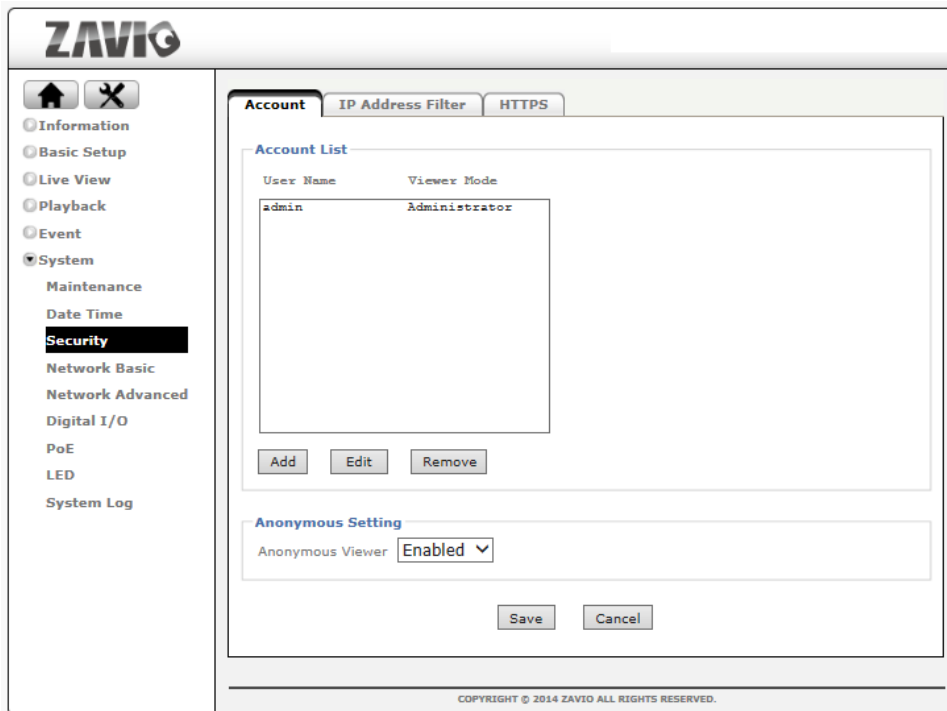

The image shows the ZAVIG web interface for configuring Security settings. The left sidebar is the same as in the previous image, but 'Security' is highlighted. The main content area is titled 'Security' and has three tabs: 'Account' (selected), 'IP Address Filter', and 'HTTPS'. The 'Account' tab shows an 'Account List' table with two columns: 'User Name' and 'Viewer Mode'. The table contains one entry: 'admin' with 'Administrator' mode. Below the table are 'Add', 'Edit', and 'Remove' buttons. The 'Anonymous Setting' section has a dropdown menu for 'Anonymous Viewer' set to 'Enabled'. At the bottom, there are 'Save' and 'Cancel' buttons. The footer contains the text 'COPYRIGHT © 2014 ZAVIG ALL RIGHTS RESERVED.'

ZAVIG

Home X

- Information
- Basic Setup
- Live View
- Playback
- Event
- System
 - Maintenance
 - Date Time
 - Security**
 - Network Basic
 - Network Advanced
 - Digital I/O
 - PoE
 - LED
 - System Log

Account IP Address Filter HTTPS

Account List

User Name	Viewer Mode
admin	Administrator

[Add] [Edit] [Remove]

Anonymous Setting

Anonymous Viewer: Enabled

[Save] [Cancel]

COPYRIGHT © 2014 ZAVIG ALL RIGHTS RESERVED.

9.3.1 Account

Refer to 5.1


9.3.2 IP Address Filter



Once you enabled it, the listed IP address are allowed or denied access to the network camera. Add the IP address that you'd like to allow or deny, select allow or deny from the list and save it.

9.3.3 HTTPS

Secure Sockets Layer (SSL) is a cryptographic protocol that provides security for

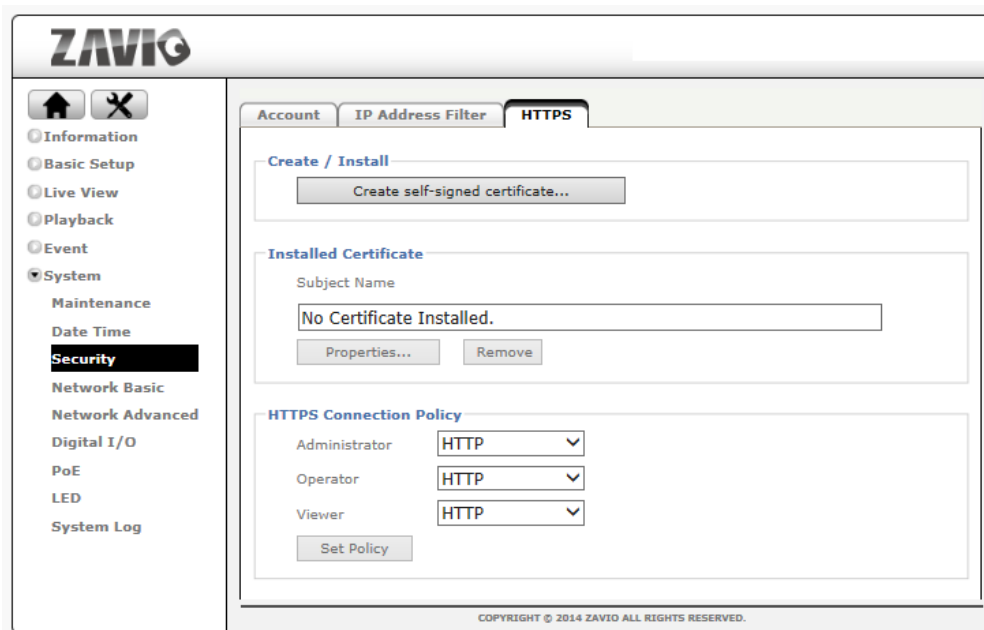

communications over networks such as the Internet.

HTTPS is a URI scheme used to indicate a secure HTTP connection (SSL encrypted). It is syntactically similar to the http:// scheme that is normally used for accessing resources using HTTP. The differences are that SSL-encrypted connections always begin with https:// instead of http://. HTTPS connections use TCP port 443 by default, compared to standard HTTP connections, which use port 80.

Create & Install:

Create a self-signed certificate for HTTPS to recognize.

Installed Certificate:

Display or remove the properties of the installed certificate.

HTTPS Connection Policy:

Set HTTPS connection policy for different level of users.

To use the HTTPS encryption, please set up "Create self-signed certificate" for the first time you use the HTTPS function, and then set up the connection policy for different users.

Note: When enable HTTPS with RTSP on mode, the IP Camera only protect the setting such as username and password and do not protect video and audio. When enable HTTPS with RTSP off mode, the IP Camera will protect all setting including video and audio.

9.4 Network Basic

The screenshot displays the ZAVIO network configuration interface. On the left is a navigation menu with options: Information, Basic Setup, Live View, Playback, Event, System, Maintenance, Date Time, Security, Network Basic (highlighted), Network Advanced, Digital I/O, PoE, LED, and System Log. The main panel is titled 'TCP/IP' and 'PPPoE'. It contains three sections: 'Internet Protocol Version 4 (TCP/IPv4)' with fields for MAC Address (00:1B:FE:04:E4:17), IP Address (10.0.0.233), Subnet Mask (255.255.255.0), Default Gateway (10.0.0.1), Preferred DNS Server (10.0.0.18), and Alternate DNS Server (10.0.0.19); 'Internet Protocol Version 6 (TCP/IPv6)' with IP Address (fe80:0000:0000:0000:021b:feff:fe04:e417) and a 64-bit field; and 'HTTP' with HTTP Port (2033) selected from a list (80, 2033, 1124 ~ 65534). 'Save' and 'Cancel' buttons are at the bottom. A copyright notice 'COPYRIGHT © 2014 ZAVIO ALL RIGHTS RESERVED.' is at the very bottom.

9.4.1 TCP/IP

Refer to section 5.2.1

9.4.2 PPPoE

Refer to section 5.2.2

9.5 Network Advanced

9.5.1 RTSP

The screenshot displays the ZAVIO web interface for configuring RTSP. On the left is a sidebar menu with 'Network Advanced' selected. The main panel shows the 'RTSP' configuration tab. It includes a 'General' section with 'RTP Port Range' set to 5000 ~ 7999 and 'RTSP Port' set to 554. Below that is the 'RTSP Configuration' section with 'Profile Name' as Profile1, 'Profile' as video.pro1, and 'Authentication' as Disabled. 'Save' and 'Cancel' buttons are present at the bottom of the configuration area.

General:

RTP Port Range- The default value of port range is 5000 ~ 7999 and can be changed from 1124 to 65534.

RTSP Port- RTSP stands for Real Time Streaming Protocol. RTSP is supported by most media clients, such as Real Player, VLC and QuickTime. If you only plan to view the camera video with your Web browser or with one of the provided software utilities, you do not need to activate this option. The default value is 554 and can be changed from 1124 to 65534.

RTSP Configuration:

This option allows you to set up the URL for each profile and define whether or not you want to enable or disable authentication. By default, the video URL and profile number are related, e.g., profilex = video.prox, but you change it any way you like. Based on the default URLs, access to the RTSP streams would be done like this:

rtsp://camera_address:554/video.pro1

rtsp://camera_address:554/video.pro2

rtsp://camera_address:554/video.pro3

rtsp://camera_address:554/video.pro4


If authentication is enabled, the URLs will change as follows:

rtsp://username:password@camera_address:554/video.pro1

[...]

rtsp://username:password@camera_address:554/video.pro4

9.5.2 UPnP

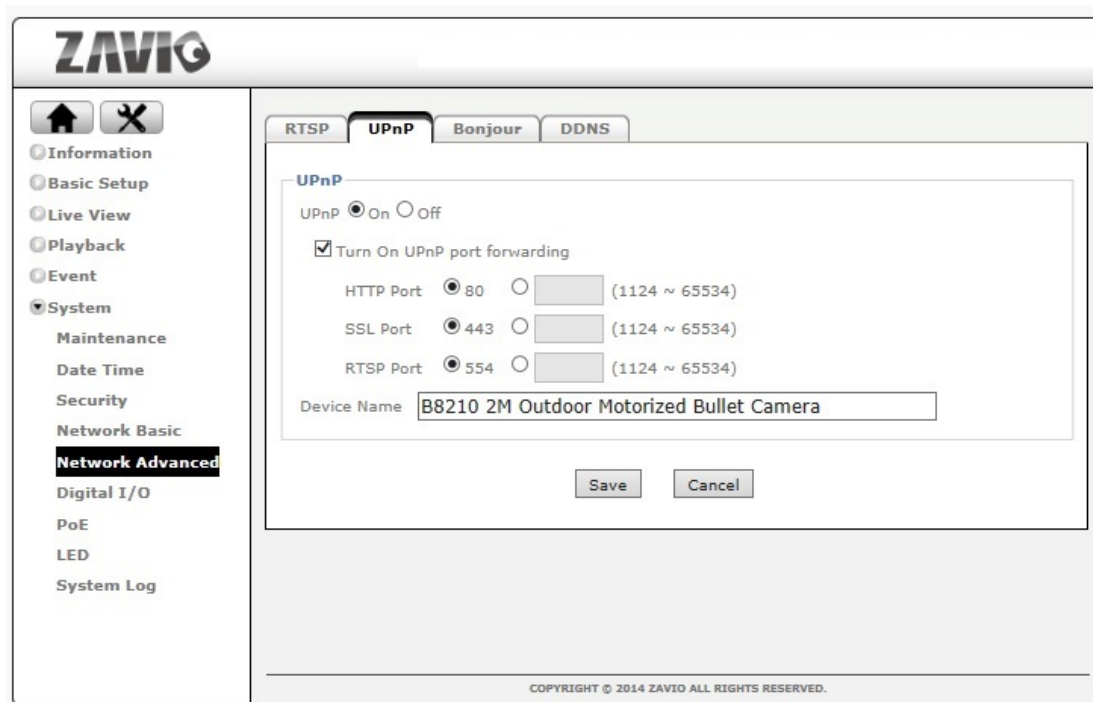

UPnP stands for Universal Plug and Play. A UPnP-enabled device, such as your network camera, announces its presence in the local network to other computers that support UPnP as well. The operating systems Windows XP, Windows Vista and Windows 7/8 support UPnP. When the network camera is connected to the network, Windows will alert the computer user of the presence of the new device (a new icon will be added to your My Network Places folder) and lets the user connect to the device instantaneously.


Furthermore, UPnP has the ability to instruct the router or firewall to open certain ports, so that a party from the outside world can contact a device on the local network, such as the network camera.

UPnP port forwarding is not supported by all routers, however. So, depending on your router or firewall, you may or may not be able use this function, also, opening ports in any router or firewall increases the risk of an intruder successfully breaking in to your network. UPnP automates this task and leaves it to the devices to negotiate which ports to open. Since this is done without any form of authentication, enabling UPnP port forwarding in your router is

not necessarily a good idea in a security-sensitive environment. You can always open individual ports in your router or firewall manually.

In the camera UPnP is enabled by default. UPnP port forwarding is disabled by default. When you enable UPnP port forwarding, the screen will reveal additional options. These are the ports the camera will instruct the router to open. Depending on the camera model, you may see different ports. The new H.264 Megapixel cameras have a simpler port model and require fewer ports than the other models. Normally there is no need to change any of these ports, unless you know that a port is already in use by a different device or application.

9.5.3 Bonjour

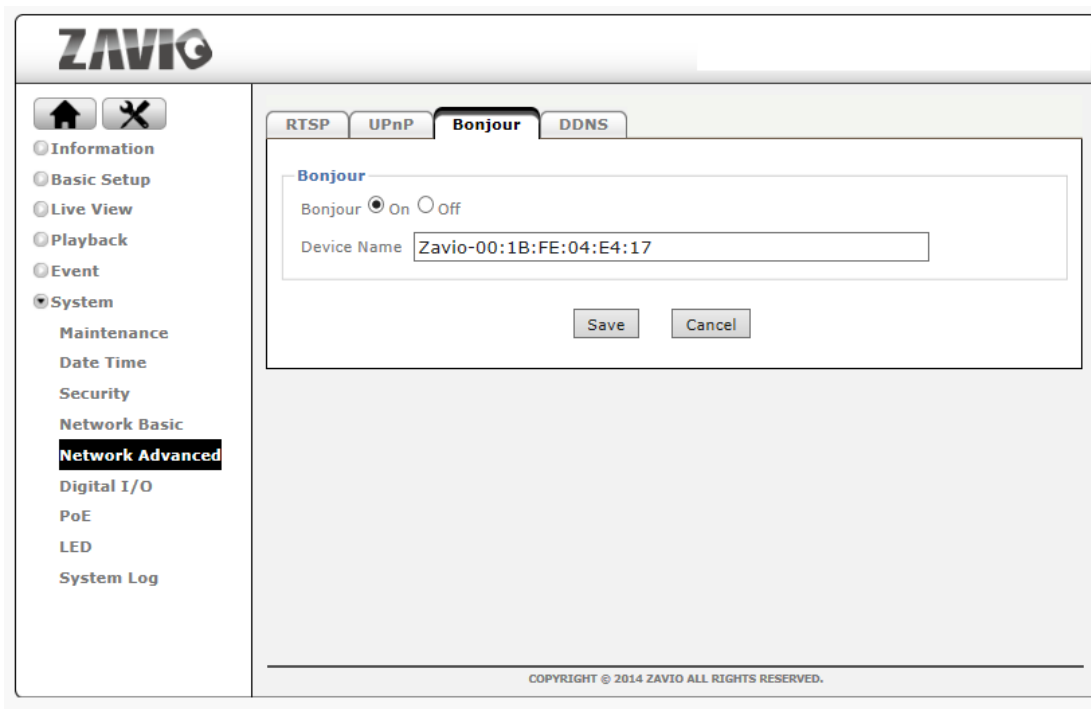

UPnP Bonjour is a service that, just like UPnP, helps to find the network camera on the network. Bonjour is available for Windows, but is more commonly used for MacOS..

Bonjour:

Bonjour On- Enables the service (on by default).

Bonjour Off- Disables the service

Device name- Enter the name of your camera here. This is the name the Bonjour service will display. If you have more than one camera installed in your network, this is an easy way to differentiate among the cameras.

9.5.4 DDNS

The screenshot shows the ZAVIO web interface. On the left is a sidebar with a navigation menu. The main area has tabs for RTSP, UPnP, Bonjour, and DDNS. The DDNS tab is selected, displaying a configuration form. The form includes a radio button for 'On' (selected) and 'Off'. Below are input fields for 'Server Name' (containing 'http://www.dyndns.org'), 'User ID', 'Password', 'Re-type Password', and 'Host Name'. There is also a 'Periodical Update' section with a radio button for 'Auto' (selected) and 'Periodical' (5 min). 'Save' and 'Cancel' buttons are at the bottom of the form. A copyright notice 'COPYRIGHT © 2014 ZAVIO ALL RIGHTS RESERVED.' is visible at the bottom of the page.

If you are not planning on connecting to the network camera over a remote connection, but only in your local network, you can skip this section.

Dynamic DNS is a network service that provides the capability for a networked device, such as a router or computer system, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured host names, addresses or other information stored in DNS.

In simpler terms: Users of private Internet services are often faced with a problem: The ISP typically changes the IP address assigned to the user based on a time interval. This may be as often as once every 24 hours or as seldom as once every 30 days. For the average user this is not a problem. However, if you want to be able to connect to the local camera (e.g., in your house) from a remote location (e.g., the office), you need to know under which Internet address the camera can be reached. However, you don't know what the current Internet IP address is. So you are beginning to see the problem.

DDNS solves this problem by allowing you to create a domain name for your home network, which you can always use to access the camera. To use the DDNS function, you will need to do the following two things.

First, create a DDNS hostname with a DDNS service provider

Secondly, set up a DDNS client in the home network that contacts the DDNS service provider and updates the IP information.

If the router in your home network is equipped with a DDNS client, we recommend using the router instead of the camera. Most SOHO routers are equipped with a DDNS client and since the router is in direct control of handling the Internet connection, it's the device best suited

for the DDNS task.

Server Name- Select the DDNS provider of your choice. In our example we use no-ip.com.

User ID- Enter the same user name here that you use to log in to your account settings on www.dyndns.org. Do not enter your DSL user account information here.


Password- Enter the password for your no-ip.com user account here. Re-type the password in the field below.

Host name- You need to enter the full host name that you have created in your no-ip.com account here.

Periodic Update- You can either specify the time in minutes after which the camera will update its IP information with the DDNS provider, or you can leave the setting as "Auto", which is recommended.

Click "Save" to activate the settings. Reboot the camera to activate the DDNS settings. After a reboot you may need to wait for a few minutes before you can access the camera with the new domain name.


9.6 Digital I/O

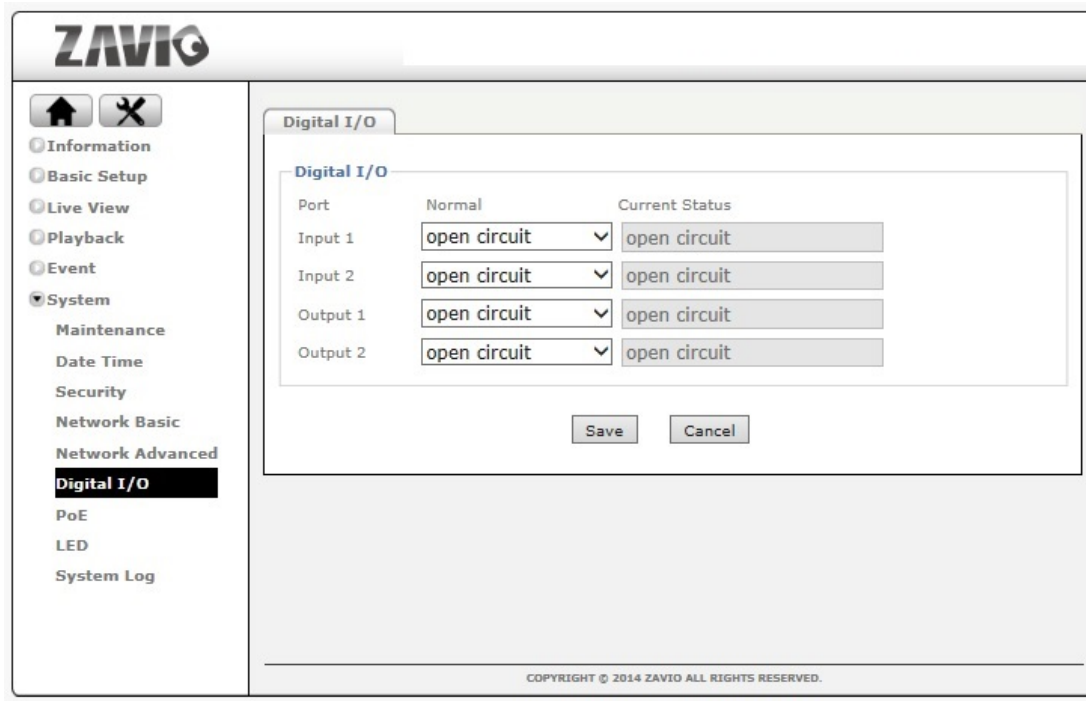

Port	Normal	Current Status
Input 1	open circuit	open circuit
Input 2	open circuit	open circuit
Output 1	open circuit	open circuit
Output 2	open circuit	open circuit

If your ZAVIO network camera is equipped with a digital I/O interface, you can configure the connections on this page. The screen shows the current status of input 1/ input 2 and output 1/ output 2. The screen also allows you to define the "normal" state of the port. The normal state can be viewed as the "non-alert-state."

9.7 PoE

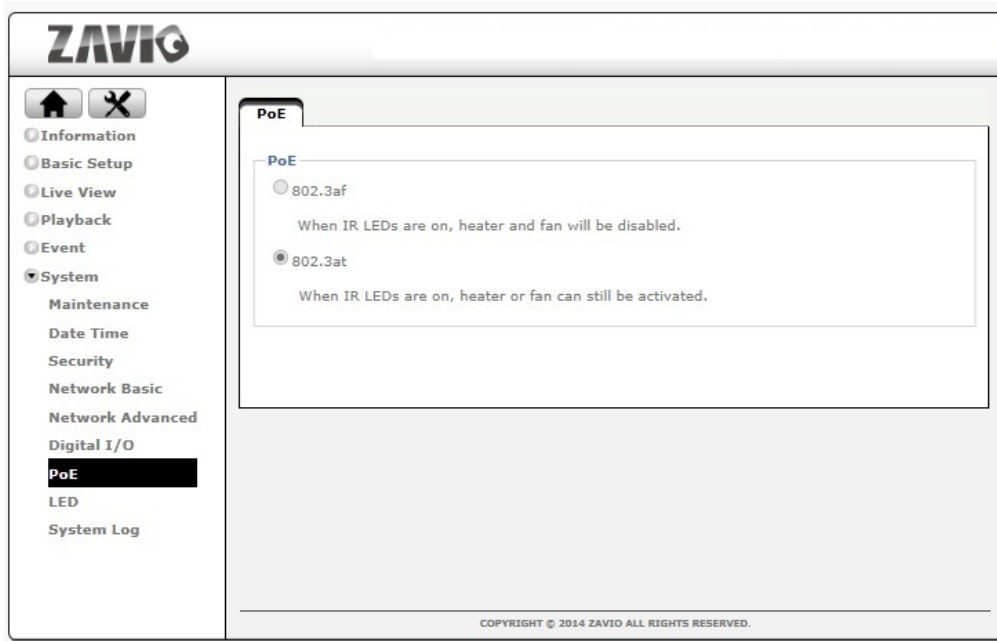

When you empower IP Camera, the system will detect af/ at mode of PoE automatically.


802.3af:

When IR LEDs are on, heater or fan will be disabled even the temperature is reaching the trigger condition.

802.3at:


When IR LEDs are on, heater or fan will be activated when the temperature is reaching the trigger condition.

9.8 LED

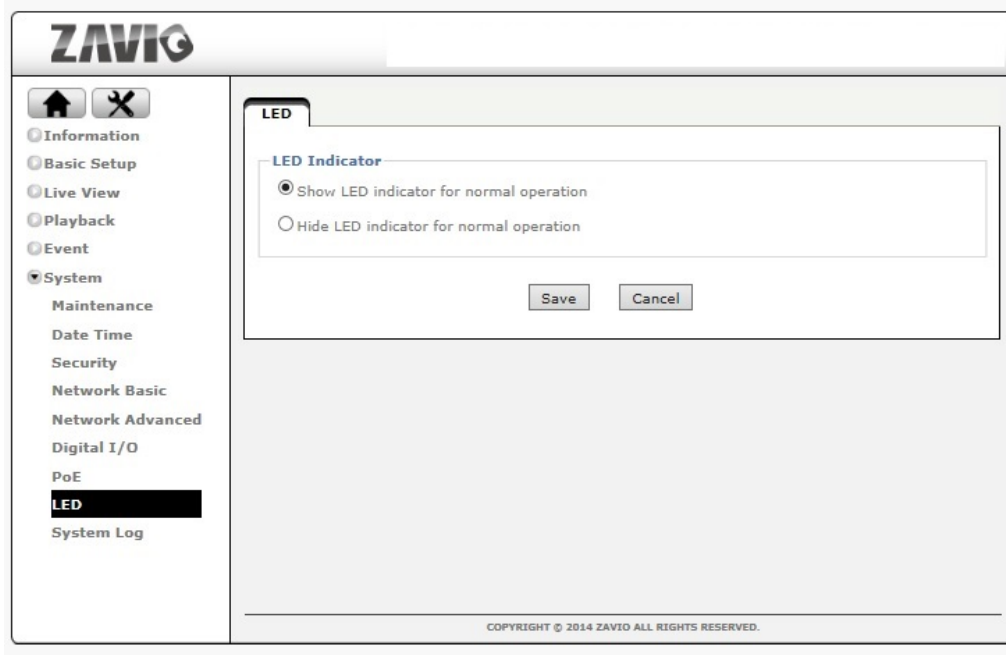

You can enable or disable the operation LEDs on your ZAVIO network camera. Hiding the LED indicator will make the camera appear to be offline while in fact it is operational and captures video.

9.9 System Log

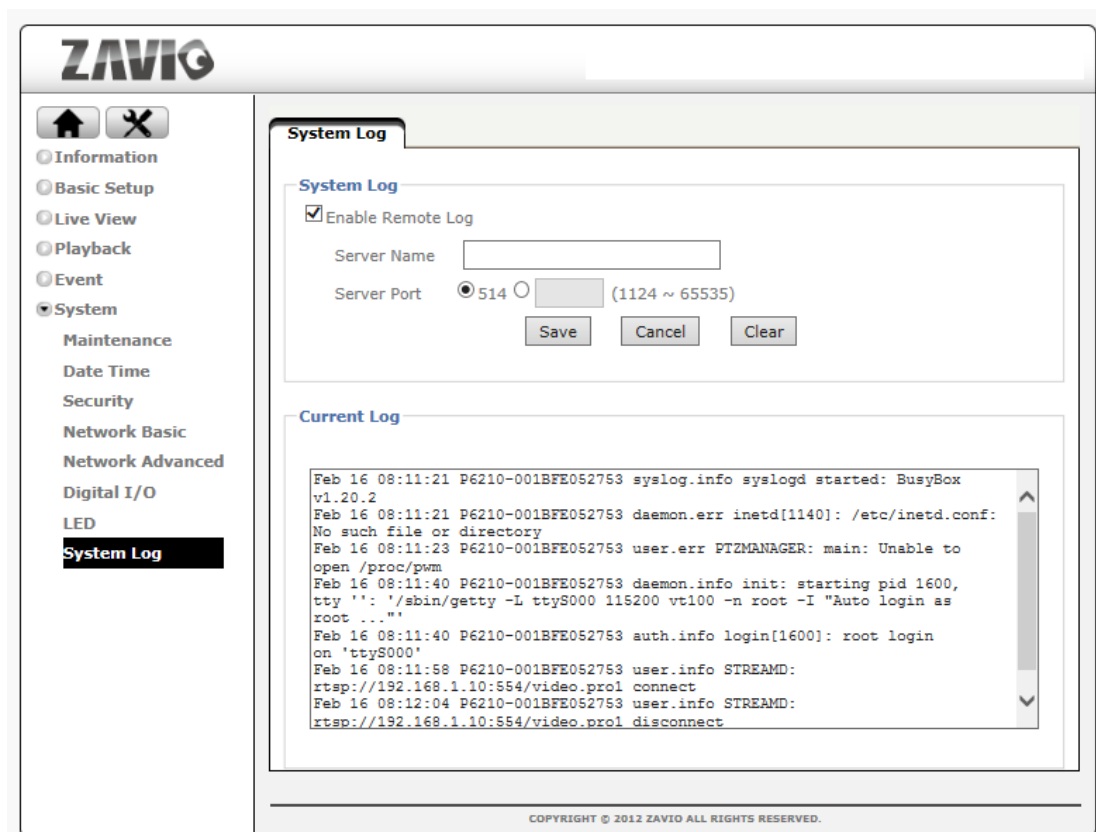

The Network Camera features a log function for system messages. These are system messages about the camera start-up procedure, e-mail deliveries, FTP uploads, motion detection and more. The camera stores the messages in its internal memory and displays them on the system log screen. Since memory is limited, the messages will eventually be truncated. If you need to log all the system messages on a remote server (e.g., for permanent record keeping of alarm events or for troubleshooting purposes), you can utilize the remote log functionality.

Enable Remote Log:

Server Name- Type in the network address of the system log server. Enter the address without any leading characters, such as `http://`.

Server Port- The standard port for this protocol is 514. If your system log server is set up differently, you can change the value here.

Current Log:

This text box displays the real-time log of the camera messages. The remote log function uses the System Log Protocol, which is a standard for forwarding log messages in an IP



network. System Log is a client/server protocol. The System Log sender (the Network Camera) sends a small (less than 1KB) textual message to the System Log server.

This user manual shows one example of a System Log server, the 3CDaemon utility by 3Com Corporation (Download Location:

http://support.3com.com/software/utilities_for_windows_32_bit.htm).

After the installation of 3CDaemon, the main program window opens and the program is ready to receive System Log messages from the network camera.


The messages shown here are the same messages that are displayed in the Web browser.

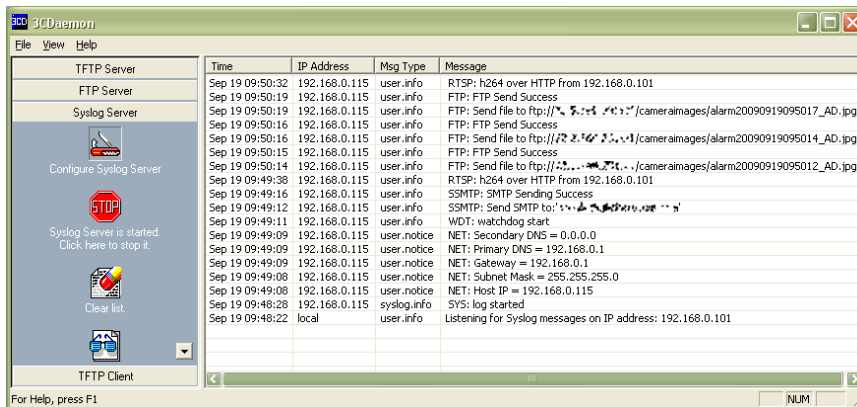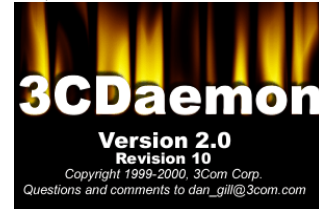

10 Video Surveillance Software

The ZAVIO Network Camera ships with a surveillance application that can monitor and record up to 64 network cameras.

ZAVIO CamGraba 2.0, the free-bundled network video management software, works perfectly with all ZAVIO network products. ZAVIO CamGraba 2.0 is designed with reliable performance and easy-to-use features offering efficient video management solution for diversely small-to-mid size IP surveillance applications. In addition, ZAVIO CamGraba Viewer is available to download from iPhone app store and Android app market.

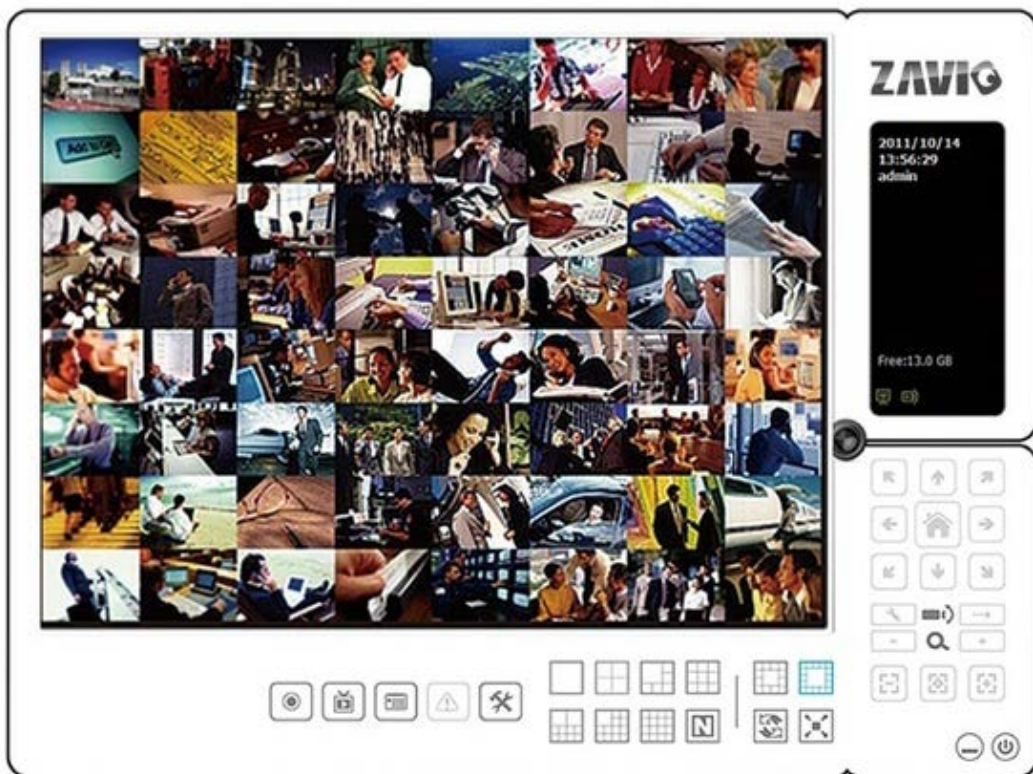

A detailed user manual is located on the Installation CD in the User Manuals folder. It contains installation instructions and information on the use of the software.

